



Installer manual

SMO 40

Accessory Card
Accessories

Table of Contents

1 General _____	2	Electrical circuit diagram _____	18
Component positions _____	2		
2 Shunt controlled additional heat _____	3	5 Hot water comfort _____	19
General _____	3	General _____	19
Pipe connections _____	3	Pipe connections _____	19
Outline diagram _____	4	Outline diagram _____	20
Electrical connection _____	5	Electrical connection _____	21
Program settings _____	6	Program settings _____	22
Electrical circuit diagram _____	7	Electrical circuit diagram _____	23
3 Step controlled additional heat _____	8	6 Active cooling (4-pipe) _____	24
General _____	8	General _____	24
Pipe connections _____	8	Pipe connections _____	24
Outline diagram _____	9	Outline diagram _____	25
Electrical connection _____	10	Electrical connection _____	26
Program settings _____	11	Program settings _____	28
Electrical circuit diagram _____	12	Wiring diagram _____	29
4 Extra climate system _____	13	7 Connection of several heat pumps _____	30
General _____	13	General _____	30
Pipe connections _____	13	Pipe connections _____	30
Outline diagram _____	14	Outline diagram _____	31
Electrical connection _____	15	Electrical connection _____	32
Program settings _____	17	Program settings _____	34
		Electrical circuit diagram _____	35


1 General

This accessory card in SMO 40 is used to enable connection and control of one of the following accessory functions.

- Shunt controlled additional heat
- Step controlled additional heat
- Extra climate system
- Hot water comfort
- Active cooling (4-pipe)
- Connection of several heat pumps

One or more accessory functions require an AXC 30 each.

Component positions

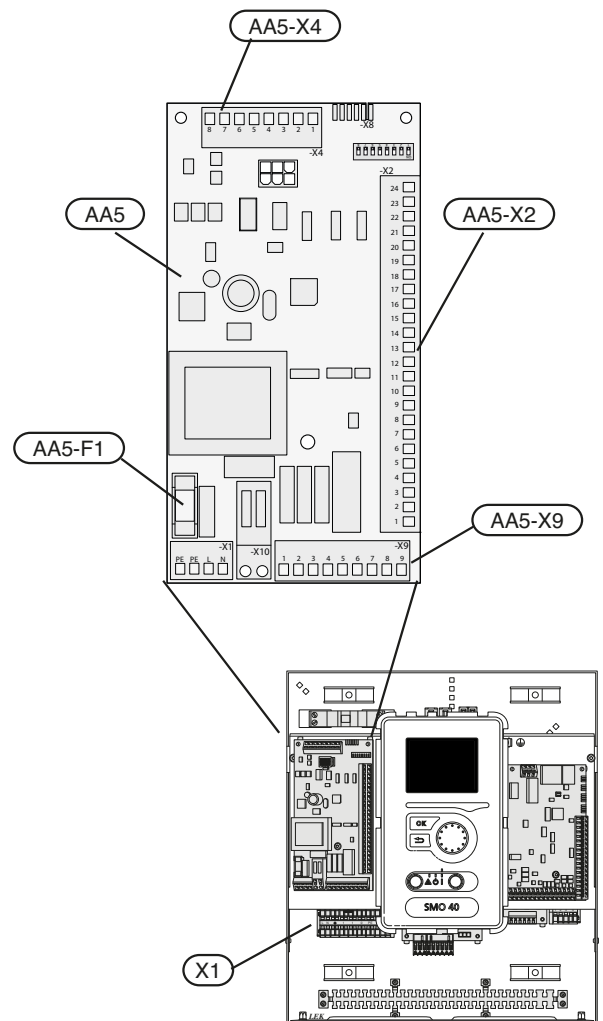

Electrical components

X1	Terminal block, power supply
AA5	Accessory card
AA5-X2	Terminal block, sensors and external blocking
AA5-X4	Terminal block, communication
AA5-X9	Terminal block, circulation pump, mixing valve and auxiliary relay
AA5-S2	DIP switch
AA5-F1	Fine wire fuse, T4AH250V

Designations in component locations according to standard IEC 81346-1 and 81346-2.

2 Shunt controlled additional heat

General

This function enables an external additional heater, e.g. an oil boiler, gas boiler or district heating exchanger to aid with heating.

The indoor module controls a shunt valve and a circulation pump (GP10) via the accessory card in SMO 40. If the heat pump does not manage to keep the correct supply temperature (BT25), the addition starts. When the boiler temperature of (BT52) has been increased to about 55 °C, the indoor module transmits a signal to the shunt (QN11) to open from the addition. The shunt (QN11) adjusts so the true supply temperature corresponds with the indoor module's theoretical calculated set point value. When the heating demand drops sufficiently so the additional heat is no longer required the shunt (QN11) closes completely. Factory set minimum run time holding the boiler prepared is 12 hours (can be set in menu 5.3.2).


Pipe connections

The external circulation pump (GP10) is positioned according to the outline diagram.

Shunt valve


The shunt valve (QN11) is located on the flow line to the climate system after the heat pump according to the outline diagram.

- Connect the flow line from the heat pump to the external heat source via the T-pipe to port B on the shunt valve (closes at reduced signal).
- Connect the flow line to the climate system from the shunt valve to the common port AB (always open)
- Connect the flow line from the external additional heat to the shunt valve to port A (opens at increased signal).

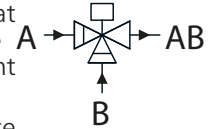

Temperature sensor

- Install the boiler sensor (BT52) in a suitable location in the external addition.
- External supply temperature sensor (BT25, connected in SMO 40) must be installed on the supply line to the radiators, after the shunt valve (QN11).

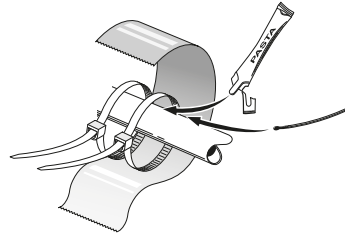

Install the temperature sensors with cable ties with the heat conducting paste and aluminium tape. Then insulate with supplied insulation tape.



NOTE

Sensor and communication cables must not be placed near power cables.

Outline diagram

Explanation

EM1 Shunt controlled additional heat, boiler

- AA5 Accessory card (SMO 40)
- BT52 Temperature sensor, boiler
- CM5 Expansion vessel, closed
- EM1 Oil/gas boiler
- FL10 Safety valve, heating medium side
- QN11 Mixing valve, addition

EB101, EB102 Heat pump system


- BT3 Temperature sensor, return
- BT12 Temperature sensor, condenser out
- EB101, EB102 Heat pump
- FL10 Safety valve
- GP12 Charge pump
- HQ1 Particle filter
- QM1 Tapping valve
- QM31 - QM32 Shut-off valve
- QM43 Shut-off valve
- RM11 Non-return valve

Miscellaneous


- AA25 SMO 40
- BT1 Outdoor sensor
- BT6 Temperature sensor, hot water charging
- BT7 Temperature sensor, hot water, top
- BT25 Temperature sensor, heating medium flow, External
- BT71 Temperature sensor, heating medium return, External
- CP10, CP11 Hot water heater
- CP20 Buffer vessel, UKV
- CM1 Expansion vessel, closed, brine side
- FL2 Safety valve
- GP10 Circulation pump, heating medium external
- QN10 Reversing valve, hot water
- RN60 - RN63 Trim valve

Designations according to standards 81346-1 and 81346-2.

Outline diagram SMO 40 and shunt controlled additional heat

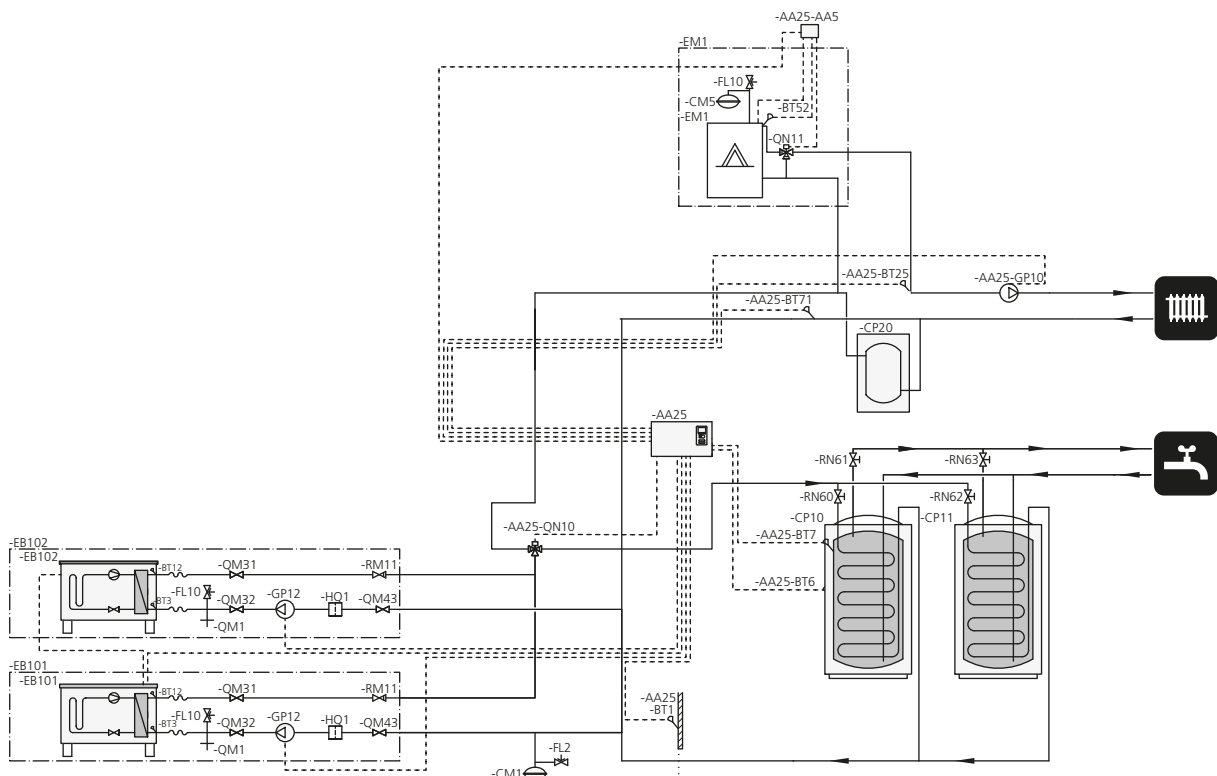

Electrical connection

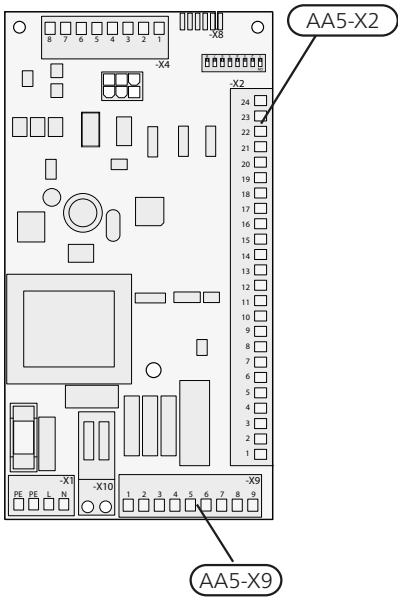

NOTE
 All electrical connections must be carried out by an authorised electrician.
 Electrical installation and wiring must be carried out in accordance with the stipulations in force.
 SMO 40 must not be powered when installing accessory functions.

Connection of sensors and external blocking


Use cable type LiYY, EKKX or similar.

Boiler sensor (BT52)

Connect the boiler sensor to AA5-X2:23-24.

External blocking (optional)


A contact (NO) can be connected to AA5-X2:21-22 to block the addition. When the contact closes, the addition is blocked.

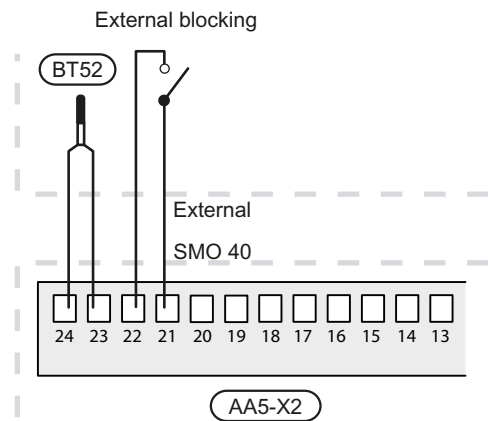

Caution
 The relay outputs on the accessory card can have a max load of 2 A (230 V) in total.


Connection of the circulation pump (GP10)

Connect the circulation pump (GP10) to AA5-X9:8 (230 V), AA5-X9:7 (N) and X1:PE.

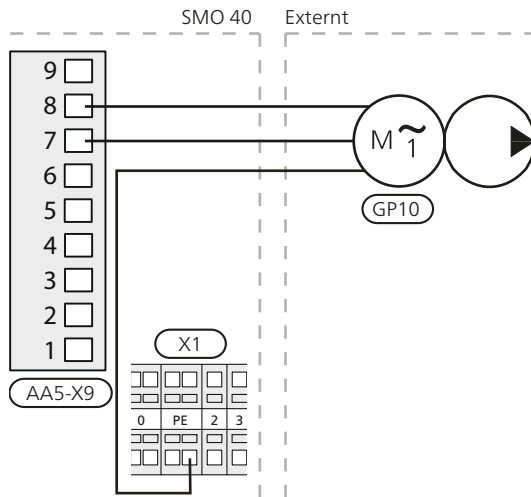


Connection of the mixing valve motor (QN11)

Connect the mixing valve motor (QN11) to AA5-X9:6 (230 V, open), AA5-X9:5 (N) and AA5-X9:4 (230 V, close).

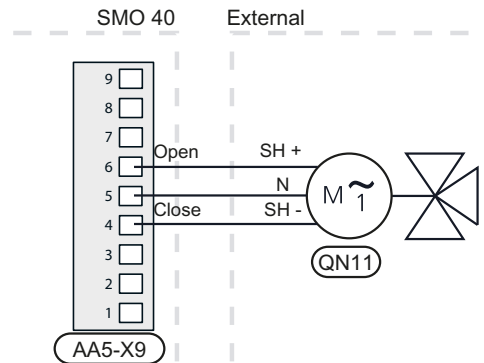


Connection of the auxiliary relay for additional heating

Connect the auxiliary relay for switching the addition on and off to AA5-X9:2 (230 V) and AA5-X9:3 (N).

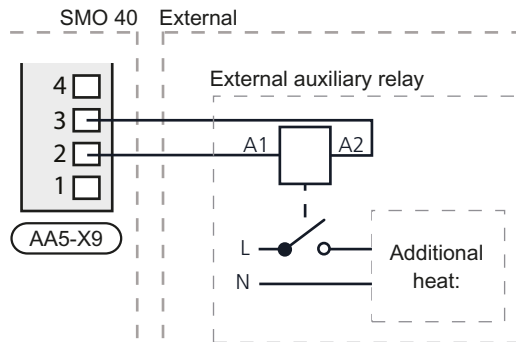

DIP switch

The DIP switch on the accessory card must be set as follows.

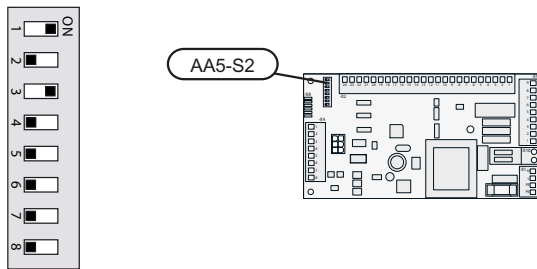

Program settings

Program setting of SMO 40 can be performed via the start guide or directly in the menu system.

Start guide

The start guide appears upon first start-up after heat pump installation, but is also found in menu 5.7.

Menu system

If you do not make all settings via the start guide or need to change any of the settings, this can be done in the menu system.

Menu 5.2 - system settings

Activating/deactivating of accessories.

Select: "shunt controlled add. heat".

Menu 5.3.2 - shunt controlled add. heat

Here you can perform the following settings:

- Select when the addition is to start.
- Minimum running time.
- Minimum boiler temperature at which the shunt can start control.
- Misc. shunt settings.

Menu 5.6 - forced control

Forced control of the different components in indoor module as well as in the different accessories that may be connected.

EM1-AA5-K1: Activating the relay for additional heating.

EM1-AA5-K2: Signal (close) to mixing valve (QN11).

EM1-AA5-K3: Signal (open) to mixing valve (QN11).


EM1-AA5-K4: Activating the circulation pump (GP10).



Caution

Also see the Installer manual for SMO 40.

Electrical circuit diagram

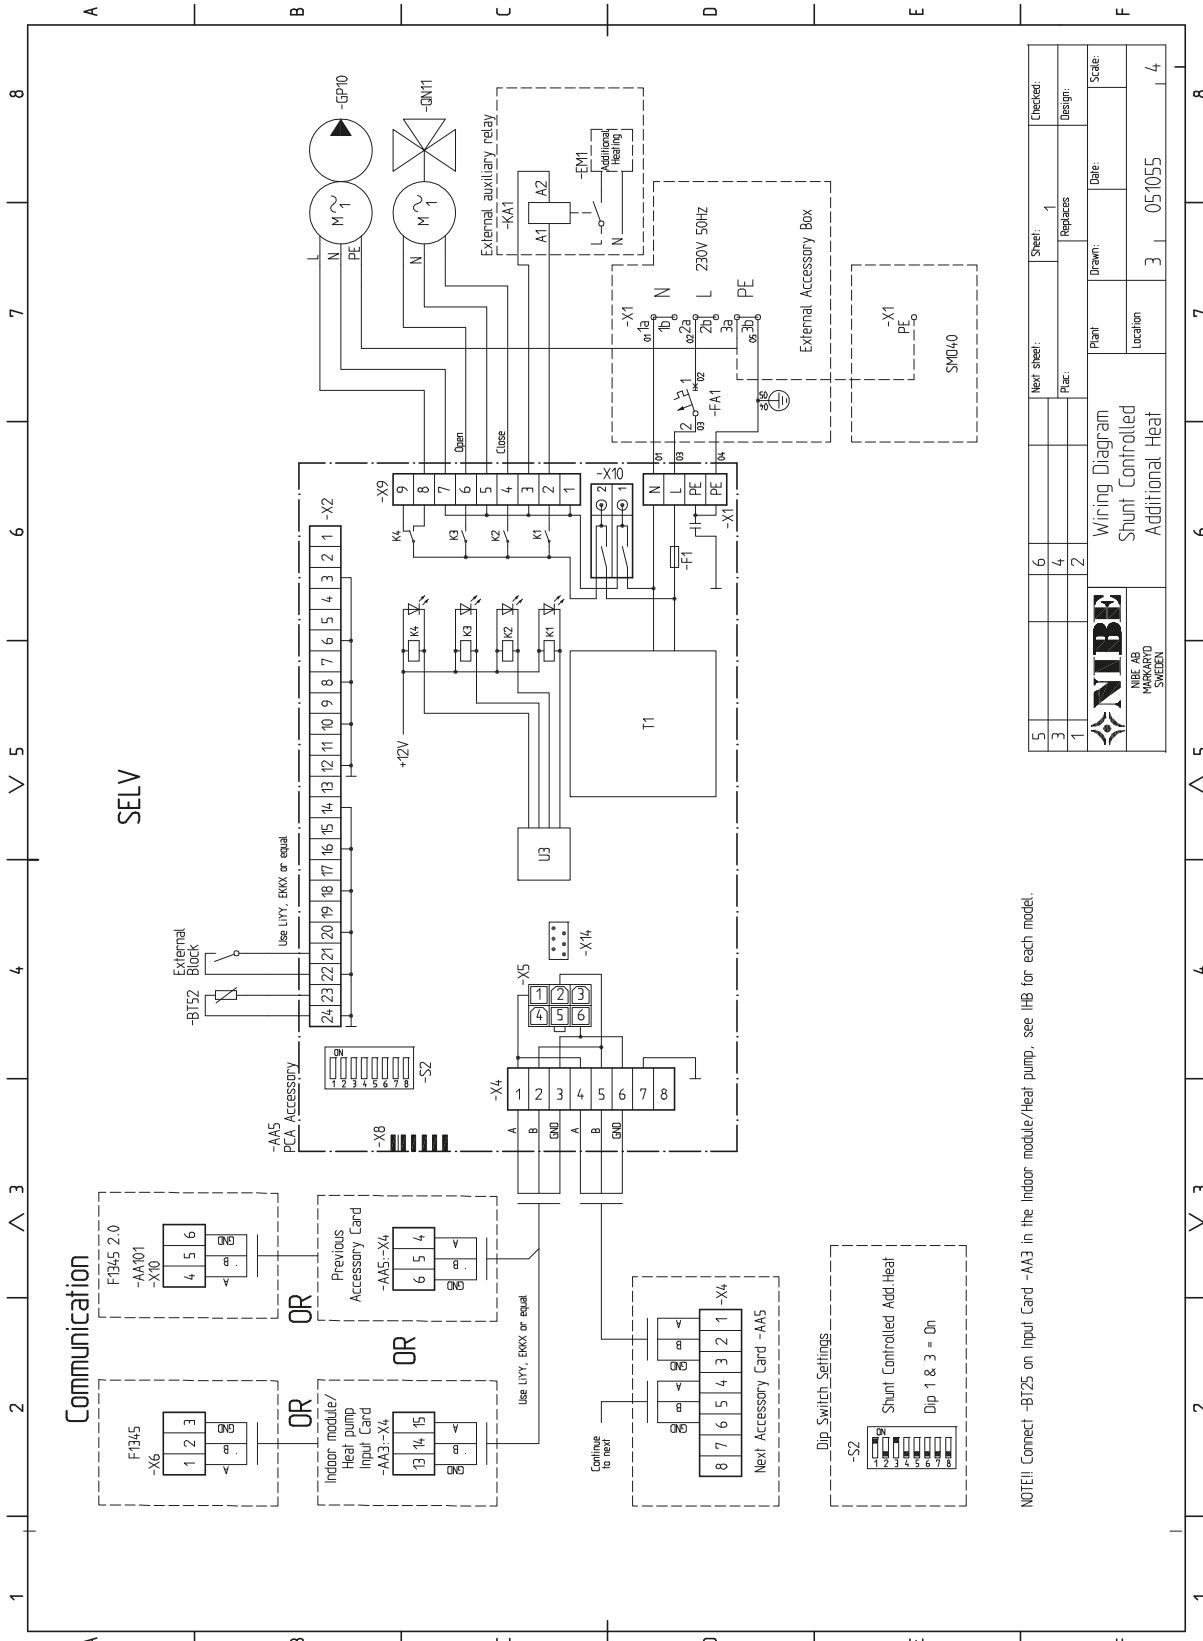

5	Next sheet:	Sheet: 1	Checked:
3	Replaces:		Design:
1	Plant:	Drawn:	Scale:
Wiring Diagram		Date:	
Shunt Controlled		Location:	
Additional Heat		3 051055	4

NIBE
 NIBE AB
 MAXIMILIANS
 SVENSKEN

NOTE!! Connect -BT25 on Input Card -AA3 in the Indoor module/Heat pump, see IHB for each model.

3 Step controlled additional heat

General

This function enables an external additional heater, e.g. an electric boiler, to aid with heating.


With the accessory card in SMO 40 a further three potential free relays can be used for addition control, which then gives max 3 linear or 7 binary steps.

The flow through the addition is ensured either by the charge pump (GP12) or the external circulation pump (GP10).

Pipe connections

The extra circulation pump (GP10) is positioned according to the outline diagram.

Temperature sensor

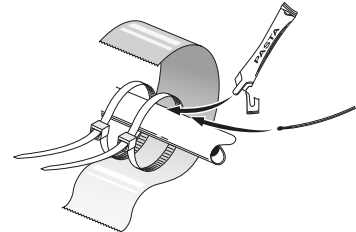

Install the temperature sensors with cable ties with the heat conducting paste and aluminium tape. Then insulate with supplied insulation tape.



NOTE

Sensor and communication cables must not be placed near power cables.

Outline diagram

Explanation


- EB1** Step controlled additional heat
- AA5 Accessory card in (SMO 40)
- CM5 Expansion vessel, closed
- EB1 External electrical additional heat
- FL10 Safety valve, heating medium side
- QM42 - QM43 Shut-off valve, heating medium side
- RN11 Trim valve
- EB101, EB102 Heat pump system**
- BT3 Temperature sensor, return
- BT12 Temperature sensor, condenser out
- EB101, EB102 Heat pump
- FL10 Safety valve, heating medium side
- GP12 Charge pump
- HQ1 Particle filter
- QM1 Tapping valve
- QM31 - QM32 Shut-off valve
- QM43 Shut-off valve
- RM11 Non-return valve

Miscellaneous


- AA25 SMO 40
- BT1 Outdoor sensor
- BT6 Temperature sensor, hot water charging
- BT7 Temperature, hot water top
- BT25 Temperature sensor, heating medium flow, External
- BT71 Temperature sensor, heating medium return, External
- CP10 - CP11 Hot water heater
- CP20 Buffer vessel, UKV
- CM1 Expansion vessel, closed
- FL2 Safety valve
- GP10 Circulation pump, heating medium external
- QN10 Reversing valve, hot water
- RN60 - RN61 Trim valve

Designations according to standards 81346-1 and 81346-2.

Outline diagram SMO 40 and step controlled additional heat

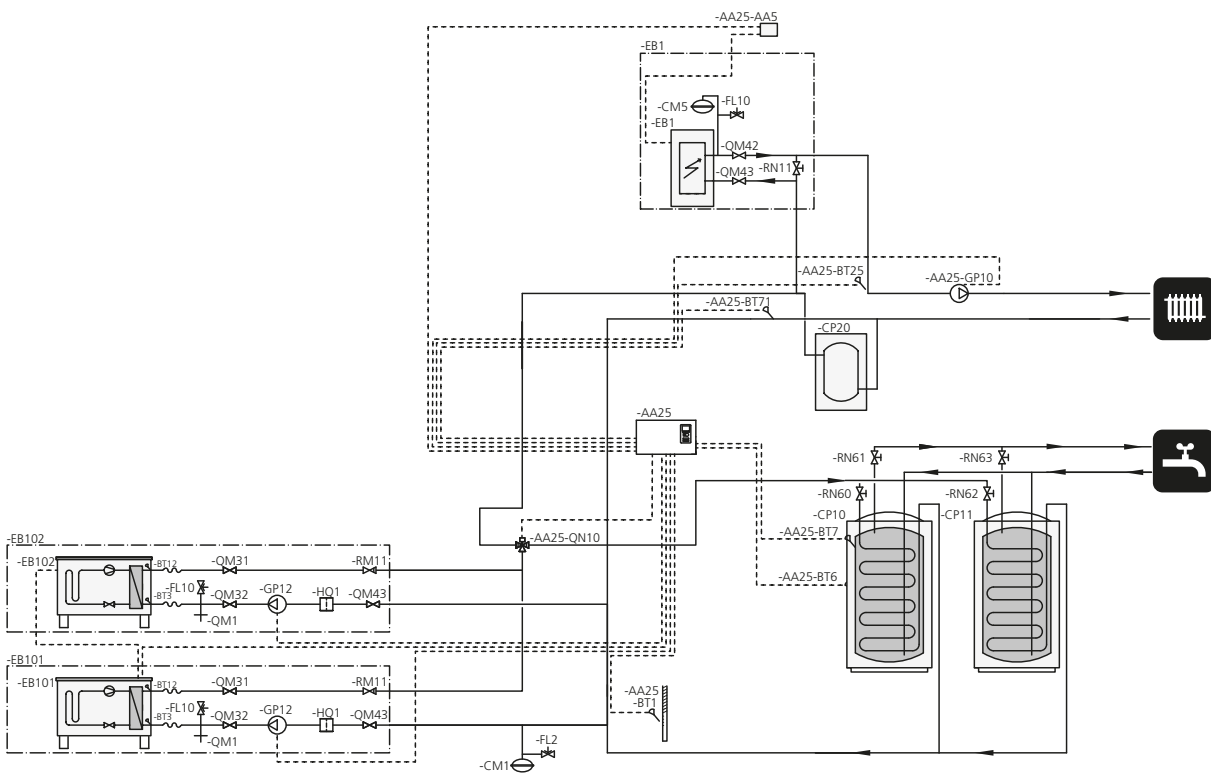

Electrical connection

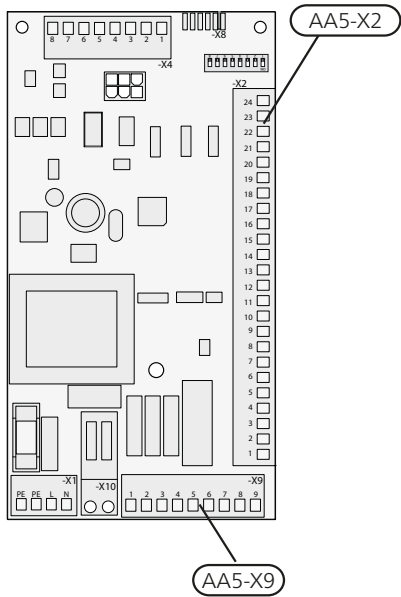

NOTE
 All electrical connections must be carried out by an authorised electrician.
 Electrical installation and wiring must be carried out in accordance with the stipulations in force.
 SMO 40 must not be powered when installing accessory functions.


Connection of sensors and external blocking

Use cable type LiYY, EKKX or similar.

External blocking (optional)

A contact (NO) can be connected to AA5-X2:23-24 to block the addition. When the contact closes, the addition is blocked.

External blocking

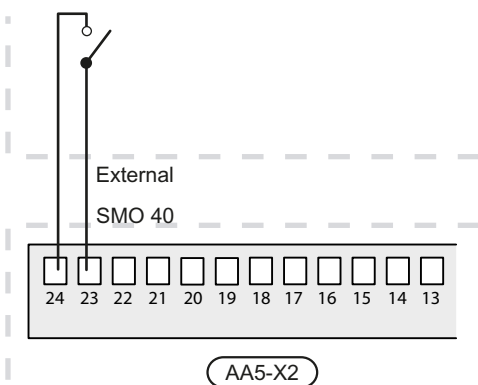


Caution

The relay outputs on the accessory card can have a max load of 2 A (230 V) in total.


Connection of the circulation pump (GP10)

Connect the circulation pump (GP10) to AA5-X9:8 (230 V), AA5-X9:7 (N) and X1:PE.

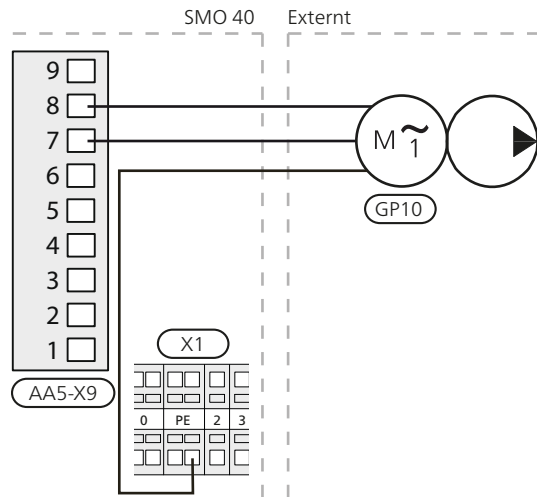


Connecting additional step

- Connect step 1 to AA5-X9:1 and 2.
- Connect step 2 to AA5-X9:3 and 4.
- Connect step 3 to AA5-X9:5 and 6.

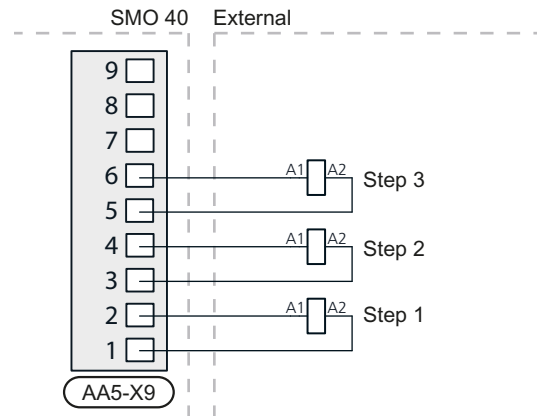

DIP switch

The DIP switch on the accessory card must be set as follows.

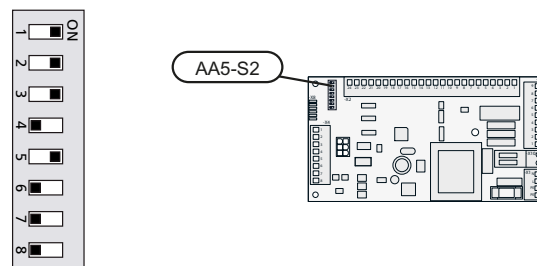

Program settings

Program setting of SMO 40 can be performed via the start guide or directly in the menu system.

Start guide

The start guide appears upon first start-up after heat pump installation, but is also found in menu 5.7.

Menu system

If you do not make all settings via the start guide or need to change any of the settings, this can be done in the menu system.

Menu 5.2 - system settings

Activating/deactivating of accessories.

Select: "step controlled add. heat".

Menu 5.3.6 - step controlled add. heat

Here you can perform the following settings:

- Select when the addition is to start.
- Set max permitted number of additional steps.
- If binary stepping is to be used.

Menu 5.6 - forced control

Forced control of the different components in the heat pump as well as in the different accessories that may be connected.

EB1-AA5-K1: Activating additional step 1.

EB1-AA5-K2: Activating additional step 2.

EB1-AA5-K3: Activating additional step 3.


EB1-AA5-K4: Activating the circulation pump (GP10).



Caution

Also see the Installer manual for SMO 40.

Electrical circuit diagram

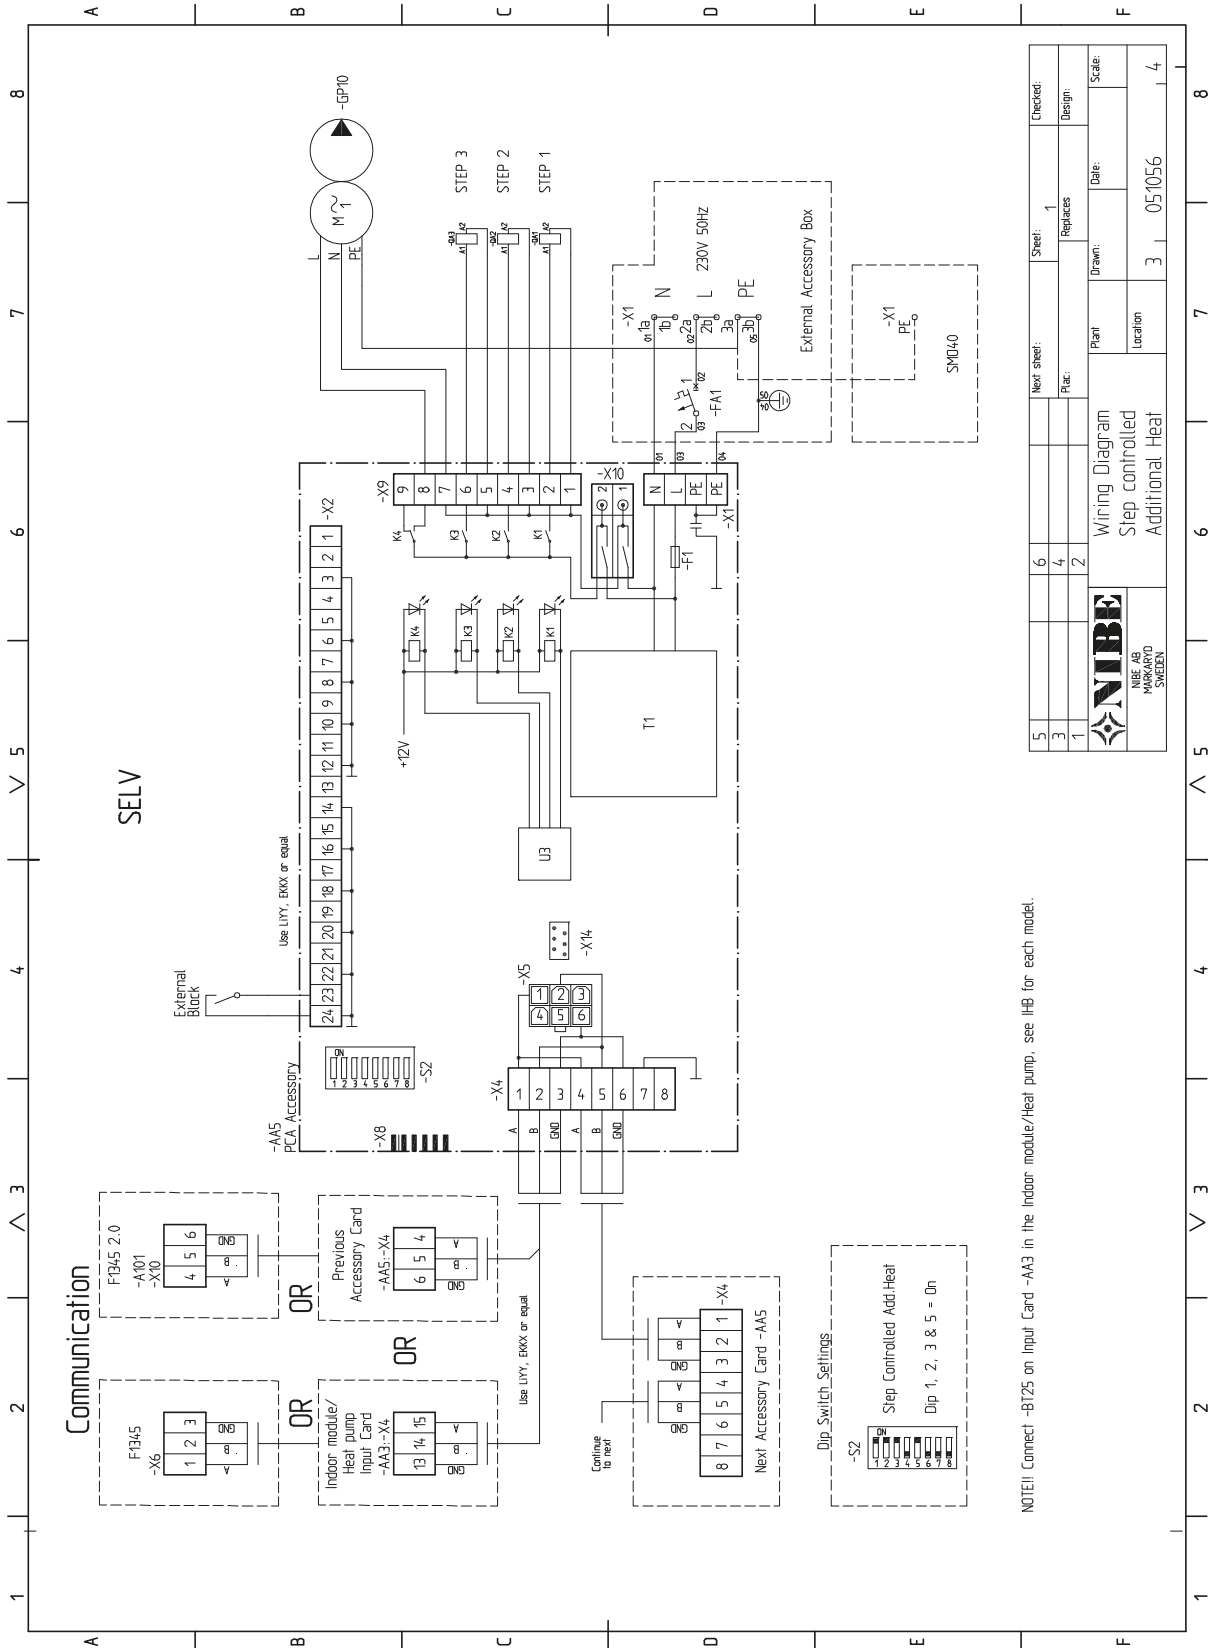

NOTE!!! Connect -B725 on Input Card -AA3 in the Indoor module/heat pump, see IHB for each model.

5	Next sheet:	Sheet:	1	Checked:	
3	Replaces:	Design:			
1	Plant:	Date:			
Wiring Diagram			Drawn:		Scale:
Step controlled			Location:	3	05.10.56
Additional Heat			Location:	3	05.10.56
			Location:	4	



4 Extra climate system

General

This accessory function is used when SMO 40 is installed in houses with up to four different climate systems that require different flow line temperatures, for example, in cases where the house has both a radiator system and an under floor heating system.



Caution

Underfloor heating systems are normally **max flow line temperature** set between 35 and 45 °C.

Check the max temperature for your floor with your floor supplier.



Caution

If the room sensor is used in a room with under floor heating it should only have an indicative function, not control of the room temperature.

Pipe connections

General

When connecting extra climate systems, they must be connected so that they have a lower working temperature than the climate system 1.


Circulation pump

The extra circulation pump (GP20) is positioned in the extra climate system according to the outline diagram.

Shunt valve


The mixing valve (QN25) is located on the flow line after the heat pump/indoor module, before the first radiator in the climate system 1. The return line from the additional climate system must be connected to the shunt valve and to the return line from the heating system 1, see image and outline diagram.

- Connect the flow line to the climate system from the heat pump to port A on the shunt valve (opens at increased signal)
- Connect the return line from the climate system to port B on the shunt valve via the T-pipe to (closes at reduced signal).
- Connect the flow line to the climate system to the common port AB on the shunt valve (always open).

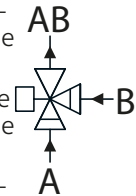

Temperature sensor

- The flow temperature sensor (BT2) is installed on the pipe between the circulation pump (GP20) and mixing valve (QN25).
- The return line sensor (BT3) is installed on the pipe from the extra climate system.

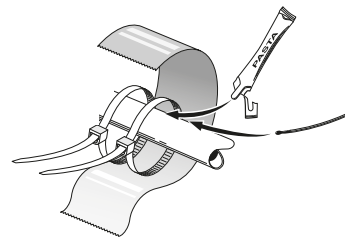

Install the temperature sensors with cable ties with the heat conducting paste and aluminium tape. Then insulate with supplied insulation tape.



NOTE

Sensor and communication cables must not be placed near power cables.

Outline diagram


Explanation

- EB1 External additional heat**
- CM5 Expansion vessel, closed
- EB1 External electrical additional heat
- FL10 Safety valve, heating medium side
- QM42 - QM43 Shut-off valve, heating medium side
- RN11 Trim valve
- EB101, EB102 Heat pump system**
- BT3 Temperature sensor, return
- BT12 Temperature sensor, condenser out
- EB101, EB102 Heat pump
- FL10 Safety valve, heating medium side
- GP12 Charge pump
- HQ1 Particle filter
- QM1 Tapping valve
- QM31 - QM32 Shut-off valve
- QM43 Shut-off valve
- RM11 Non-return valve
- EP21 Climate system 2**
- AA5 Accessory card SMO 40
- BT2 Flow temperature sensor, extra climate system


- BT3 Return line sensor, extra climate system
- GP20 Circulation pump, extra climate system
- QN25 Shunt valve
- Miscellaneous**
- AA25 SMO 40
- BT1 Outdoor sensor
- BT6 Temperature sensor, hot water charging
- BT7 Temperature sensor, hot water, top
- BT25 Temperature sensor, heating medium flow, External
- BT71 Temperature sensor, heating medium return, External
- CP10 - CP11 Hot water heater
- CP20 Buffer vessel, UKV
- CM1 Expansion vessel, closed
- FL2 Safety valve
- GP10 Circulation pump, heating medium external
- QN10 Reversing valve, hot water
- RN60 - RN61 Trim valve

Designations in component locations according to standard IEC 81346-1 and 81346-2.

Outline diagram SMO40 and up to three extra climate systems

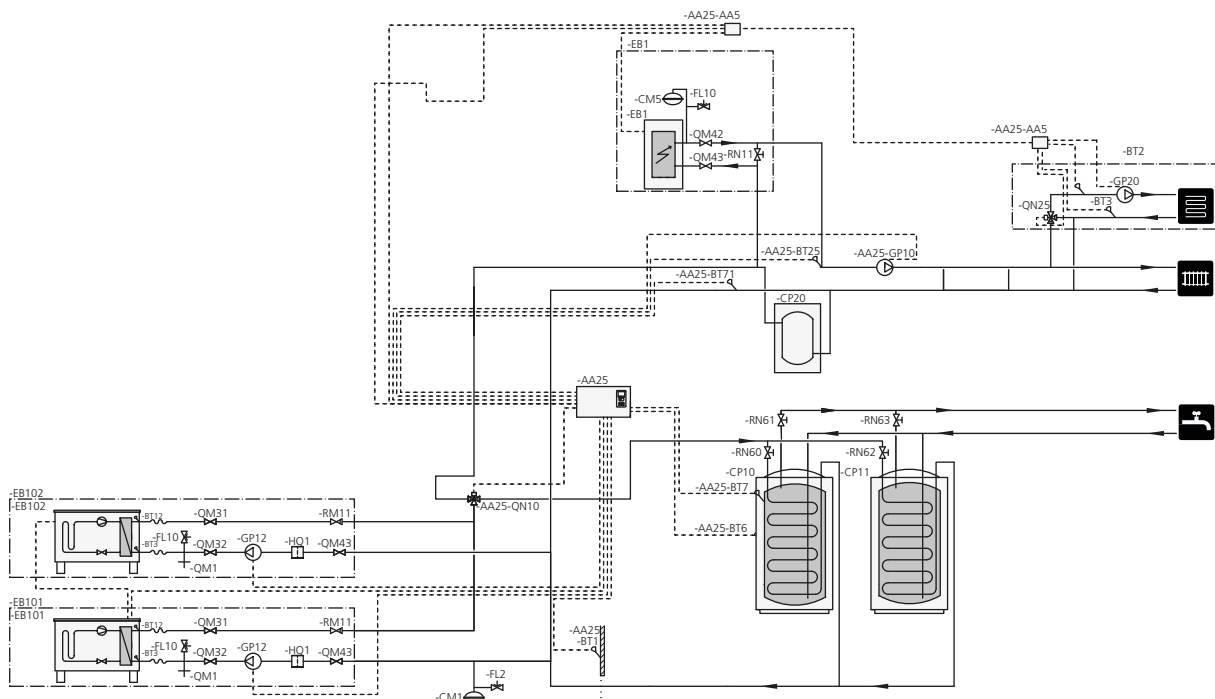

Electrical connection

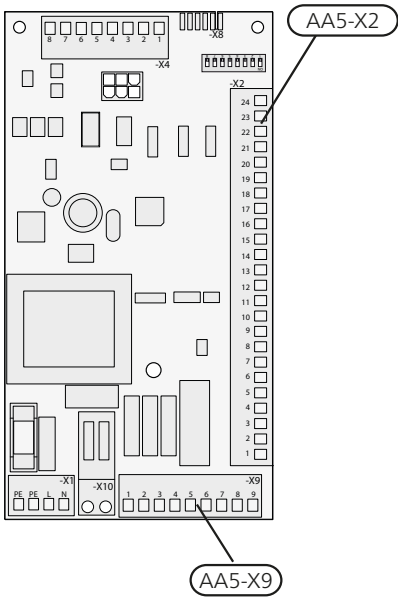

NOTE
 All electrical connections must be carried out by an authorised electrician.
 Electrical installation and wiring must be carried out in accordance with the stipulations in force.
 SMO 40 must not be powered when installing accessory functions.

Connection of sensors and external adjustment

Use cable type LiYY, EKKX or similar.

Flow temperature sensor, extra climate system (BT2)

Connect the flow temperature sensor to AA5-X2:23-24.

Return line sensor, extra climate system (BT3)


Connect the return line sensor to AA5-X2:21-22.

Room temperature sensor, extra climate system (BT50) (optional)

Connect the room temperature sensor to AA5-X2:19-20.

External adjustment (optional)


A potential free switch can be connected to AA5-X2:17-18 for external adjustment of the climate system.

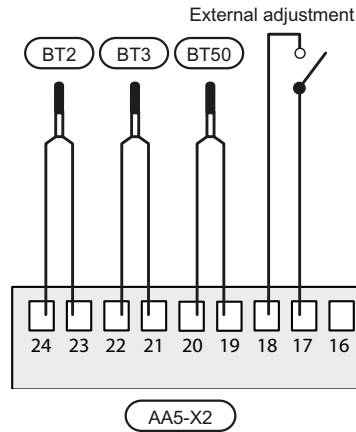

Caution
 The relay outputs on the accessory card can have a max load of 2 A (230 V) in total.


Connection of the circulation pump (GP20)

Connect the circulation pump (GP20) to AA5-X9:8 (230 V), AA5-X9:7 (N) and X1:PE.

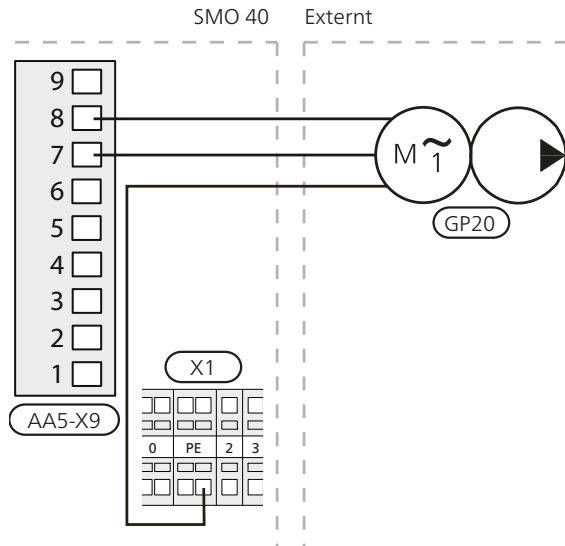


DIP switch

The DIP switch on the accessory card must be set as follows.

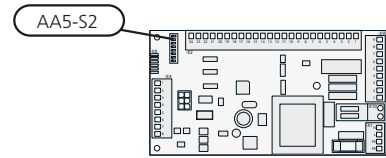


Climate system

2



Connection of the mixing valve motor (QN25)

Connect the mixing valve motor (QN25) to AA5-X9:6 (230 V, open), AA5-X9:5 (N) and AA5-X9:4 (230 V, close).

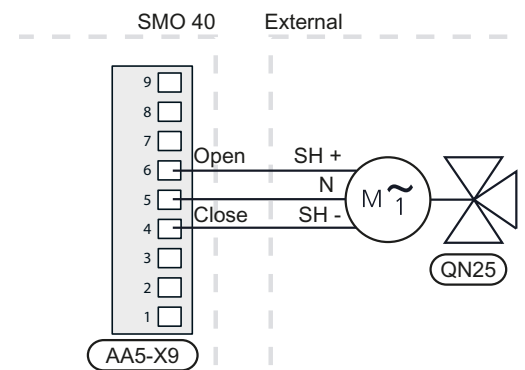

Program settings

Program setting of SMO 40 can be performed via the start guide or directly in the menu system.

Start guide

The start guide appears upon first start-up after heat pump/indoor module installation, but is also found in menu 5.7.

Menu system

If you do not make all settings via the start guide or need to change any of the settings, this can be done in the menu system.

Menu 5.2.4 - accessories

Activating/deactivating of accessories.

Select: "climate system 2", "climate system 3" and/or "climate system 4" depending on how many climate systems are installed.

Menu 5.1.2 - max flow line temperature

Setting the maximum flow temperature for each climate system.

Menu 5.3.3 - extra climate system

Mixing valve settings for extra installed climate system.

Menu 1.1 - temperature

Setting the indoor temperature.

Menu 1.9.1 - heating curve

Setting the heat curve.

Menu 1.9.2 - external adjustment

Setting external adjustment.

Menu 1.9.3 - min. flow line temp.

Setting the minimum flow temperature for each climate system.

Menu 1.9.4 - room sensor settings

Activating and setting the room temperature sensor.

Menu 5.6 - forced control

Forced control of the different components in the heat pump as well as in the different accessories that may be connected. 2 is climate system, EP22, 3 is climate system EP23, 4 is climate system EP21.

EP2#-AA5-K1: No function.

EP2#-AA5-K2: Signal (close) to mixing valve (QN25).

EP2#-AA5-K3: Signal (open) to mixing valve (QN25).


EP2#-AA5-K4: Activating the circulation pump (GP20).



Caution

Also see the Installer manual for relevant heat pump/indoor module.

Electrical circuit diagram

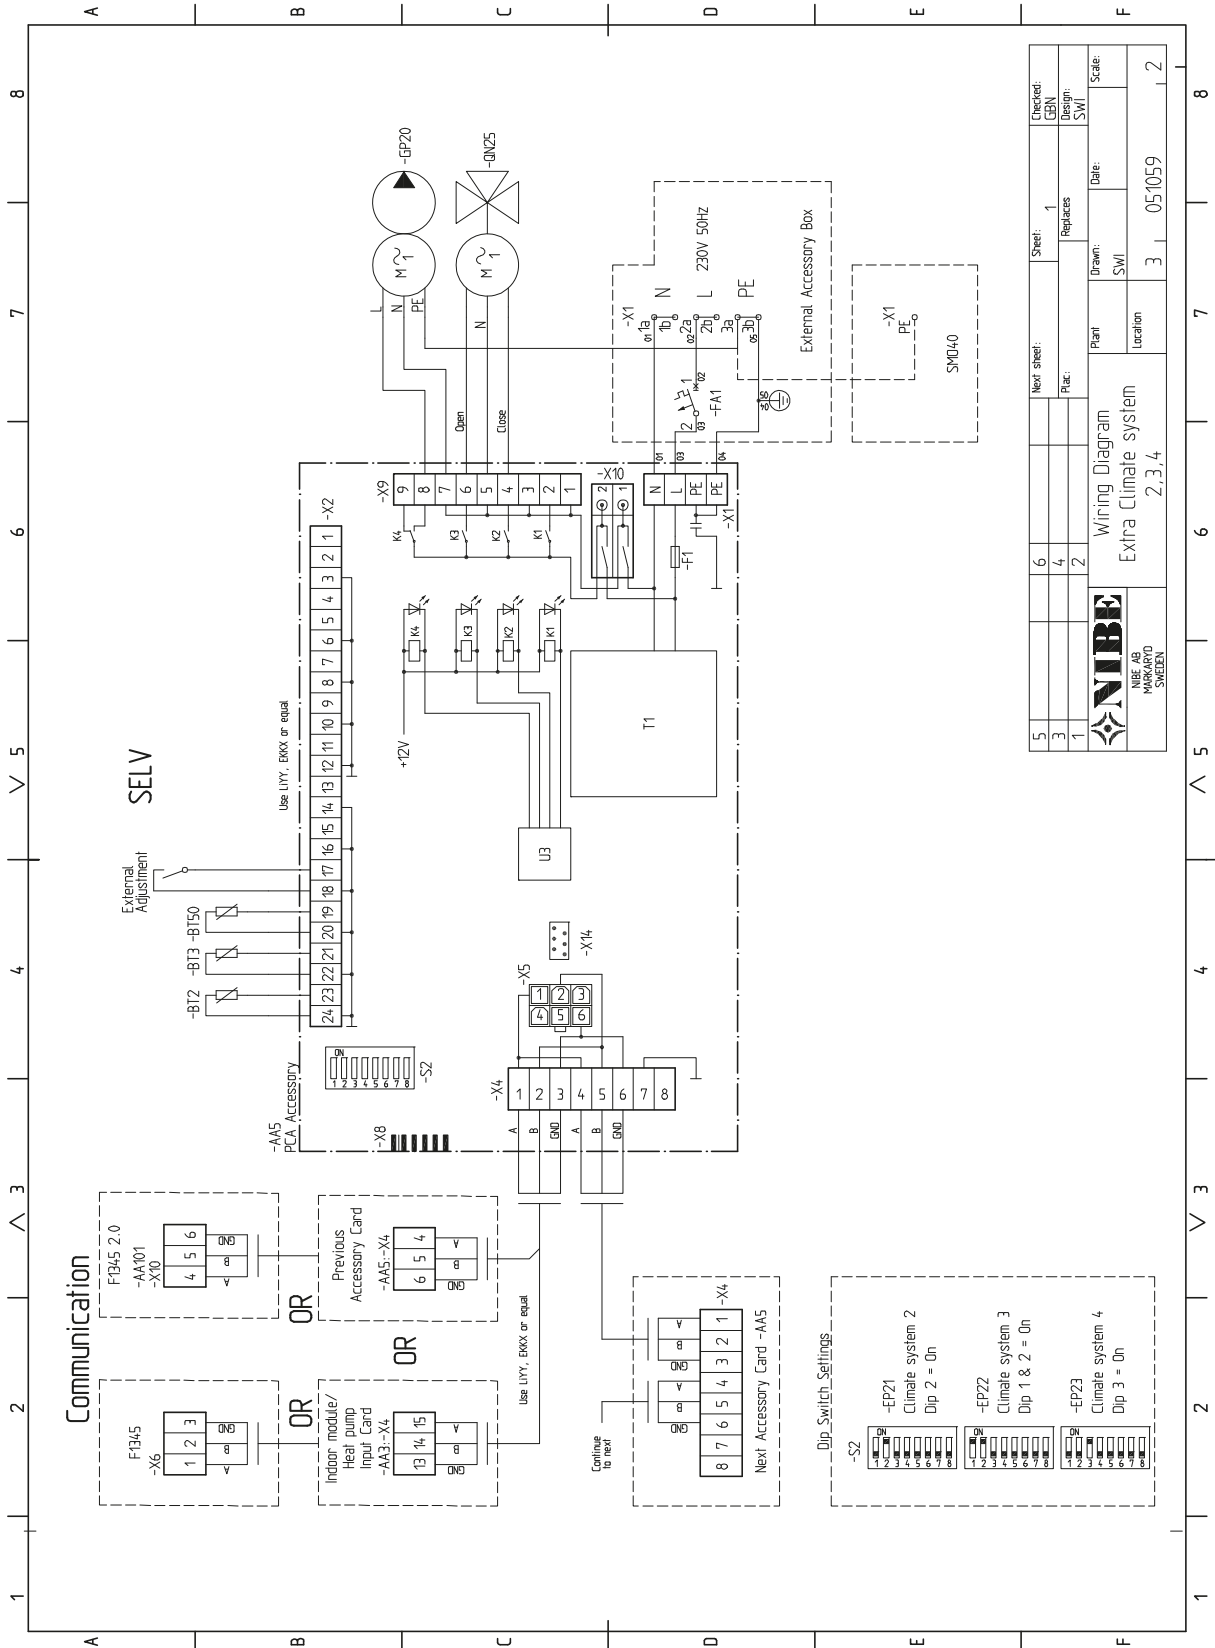

5	Next sheet:	Sheet:	Checked:
3	6	1	CBN
1	4	Replaces:	Design:
	2		SWI
		Plant:	Date:
		SWI	
		Location:	Scale:
		2, 3, 4	
		3	05.10.59
		2	



Wiring Diagram
Extra Climate system
2, 3, 4

5 Hot water comfort

General

This function allows temporary lux, mixing valve and hot water circulation.

Temporary lux (extra hot water)

If an immersion heater is installed in the tank it can be permitted to produce hot water, at the same time as the heat pump prioritises heating.

Mixing valve

A temperature sensor reads the temperature of the outgoing hot water to the domestic hot water and adjusts the mixing valve from the water heater until the set temperature has been reached.

Hot water circulation (VVC)


One pump can be controlled for the circulation of the hot water during selectable periods.

Pipe connections

Mixing valve


The mixing valve (FQ1) is located on the outgoing hot water line from the water heater according to the outline diagram.

- Connect the incoming cold water via the T-pipe to the port B on the mixing valve (closes at signal).
- Connect the mixed water to the domestic hot water taps from the mixing valve to the common port AB (always open).
- Connect the outgoing hot water from the water heater to the mixing valve to port A (opens on signal)

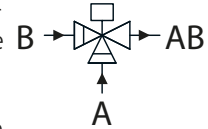

Temperature sensor

- Temperature sensor, outgoing hot water, (BT70) installed in a suitable place after the mixing valve (FQ1).

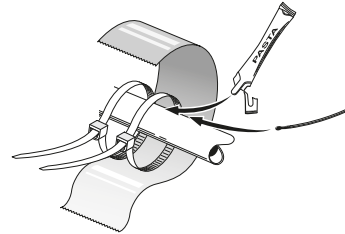

Install the temperature sensors with cable ties with the heat conducting paste and aluminium tape. Then insulate with supplied insulation tape.



NOTE

Sensor and communication cables must not be placed near power cables.


Outline diagram

Explanation


- EB1** External additional heat
- CM5 Expansion vessel, closed
- EB1 External electrical additional heat
- FL10 Safety valve, heating medium side
- QM42 - QM43 Shut-off valve, heating medium side
- RN11 Trim valve
- EB101, EB102** Heat pump system
- BT3 Temperature sensor, return
- BT12 Temperature sensor, condenser out
- EB101, EB102 Heat pump
- FL10 Safety valve, heating medium side
- GP12 Charge pump
- HQ1 Particle filter
- QM1 Tapping valve
- QM31 - QM32 Shut-off valve
- QM43 Shut-off valve
- RM11 Non-return valve
- QZ1** Hot water comfort
- AA5 Accessory card SMO 40

- BT70 Temperature sensor, outgoing hot water
- EB10 Additional water heater
- GP11 Circulation pump, domestic hot water circulation
- RM23 Non-return valve
- RN20 Trim valve
- Miscellaneous**
- AA25 SMO 40
- BT1 Outdoor sensor
- BT6 Temperature sensor, hot water charging
- BT7 Temperature sensor, hot water, top
- BT25 Temperature sensor, heating medium flow, External
- BT71 Temperature sensor, heating medium return, External
- CP10 - CP11 Hot water heater
- CP20 Buffer vessel, UKV
- CM1 Expansion vessel, closed
- FL2 Safety valve
- GP10 Circulation pump, heating medium external
- QN10 Reversing valve, hot water
- RN60 - RN61 Trim valve

Outline diagram SMO40 and hot water comfort

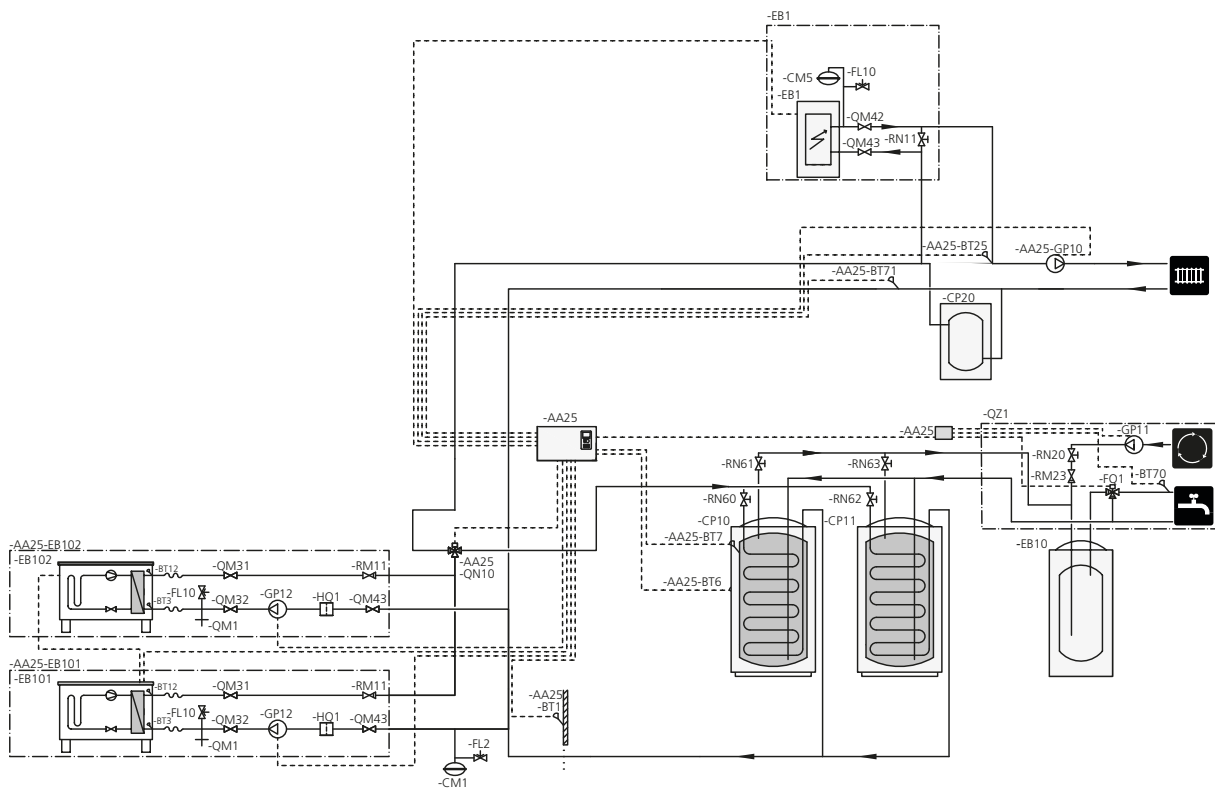


Electrical connection

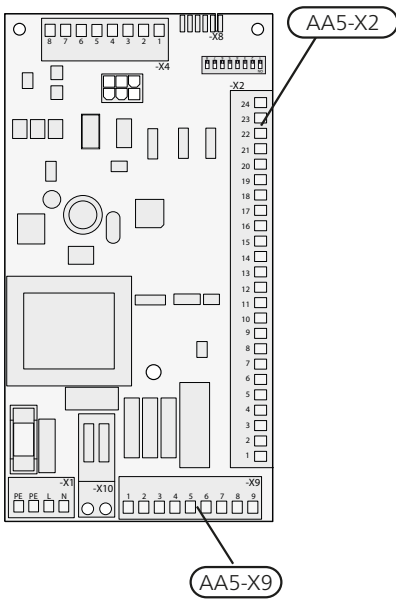

Connection of the hot water circulation pump (GP11)

Connect the circulation pump (GP11) to AA5-X9:8 (230 V), AA5-X9:7 (N) and X1:PE.

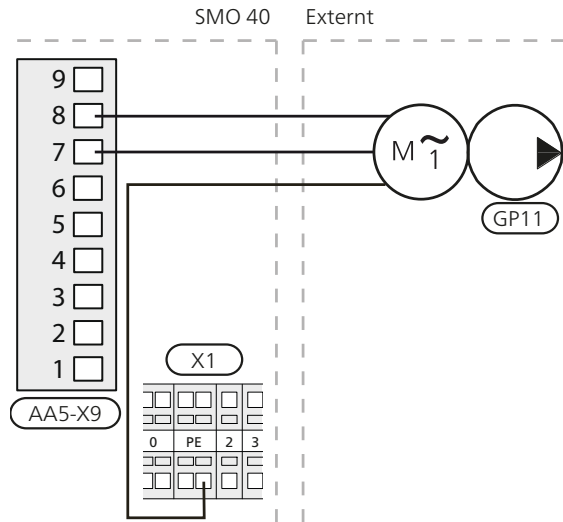

NOTE


All electrical connections must be carried out by an authorised electrician.

Electrical installation and wiring must be carried out in accordance with the stipulations in force.

SMO 40 must not be powered when installing accessory functions.

Connection of the mixing valve (FQ1)

Connect the mixing valve motor (FQ1) to AA5-X9:6 (230 V, open), AA5-X9:5 (N) and AA5-X9:4 (230 V, close).

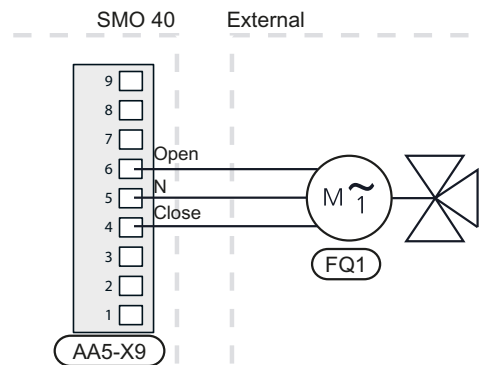


Connecting sensors

Use cable type LiYY, EKKX or similar.

How water sensor, flow line (BT70)

Connect hot water sensor to AA5-X2:23-24.

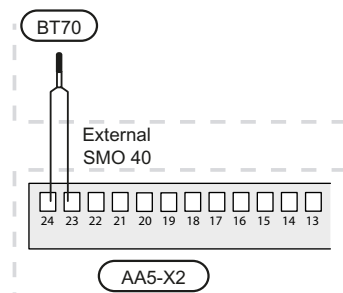


Caution

The relay outputs on the accessory card can have a max load of 2 A (230 V) in total.



Connecting auxiliary relay for temporary lux (extra hot water)

Connect the auxiliary relay for switching the addition on and off to AA5-X9:1 (N) and AA5-X9:2 (230 V).

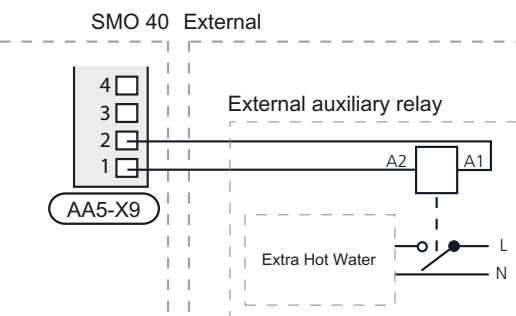

DIP switch

The DIP switch on the accessory card must be set as follows.

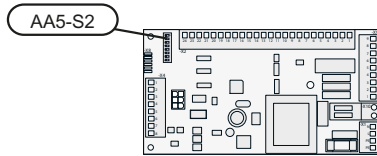

Program settings

Program setting of SMO 40 can be performed via the start guide or directly in the menu system.

Start guide

The start guide appears upon first start-up after heat pump installation, but is also found in menu 5.7.

Menu system

If you do not make all settings via the start guide or need to change any of the settings, this can be done in the menu system.

Menu 5.2.4 - accessories

Activating/deactivating of accessories.

Select: "hot water comfort".

Menu 2.9.2 - hot water recirc.

Here you can make the following settings for hot water circulation for up to three periods per day:

- How long the hot water circulation pump must run per operating instance
- How long the hot water circulation pump must be stationary between operating instances.

Menu 5.3.8 - hot water comfort

Here you can perform the following settings:

- If an immersion heater is installed in the tank and whether it can be permitted to charge hot water if the compressors in the heat pump prioritise heating.
- Whether a mixing valve for limiting the temperature of hot water from the water heater is installed.
- Various shunt settings and outgoing hot water temperature from the tank for the mixing valve.

Menu 5.6 - forced control

Forced control of the different components in the heat pump as well as in the different accessories that may be connected.

QZ1-AA5-K1: Activating the relay for extra hot water.

QZ1-AA5-K2: Signal (close) to the mixing valve (FQ1).

QZ1-AA5-K3: Signal (open) to the mixing valve (FQ1).


QZ1-AA5-K4: Activating the circulation pump (GP11).



Caution

Also see the Installer manual for SMO 40.

Electrical circuit diagram

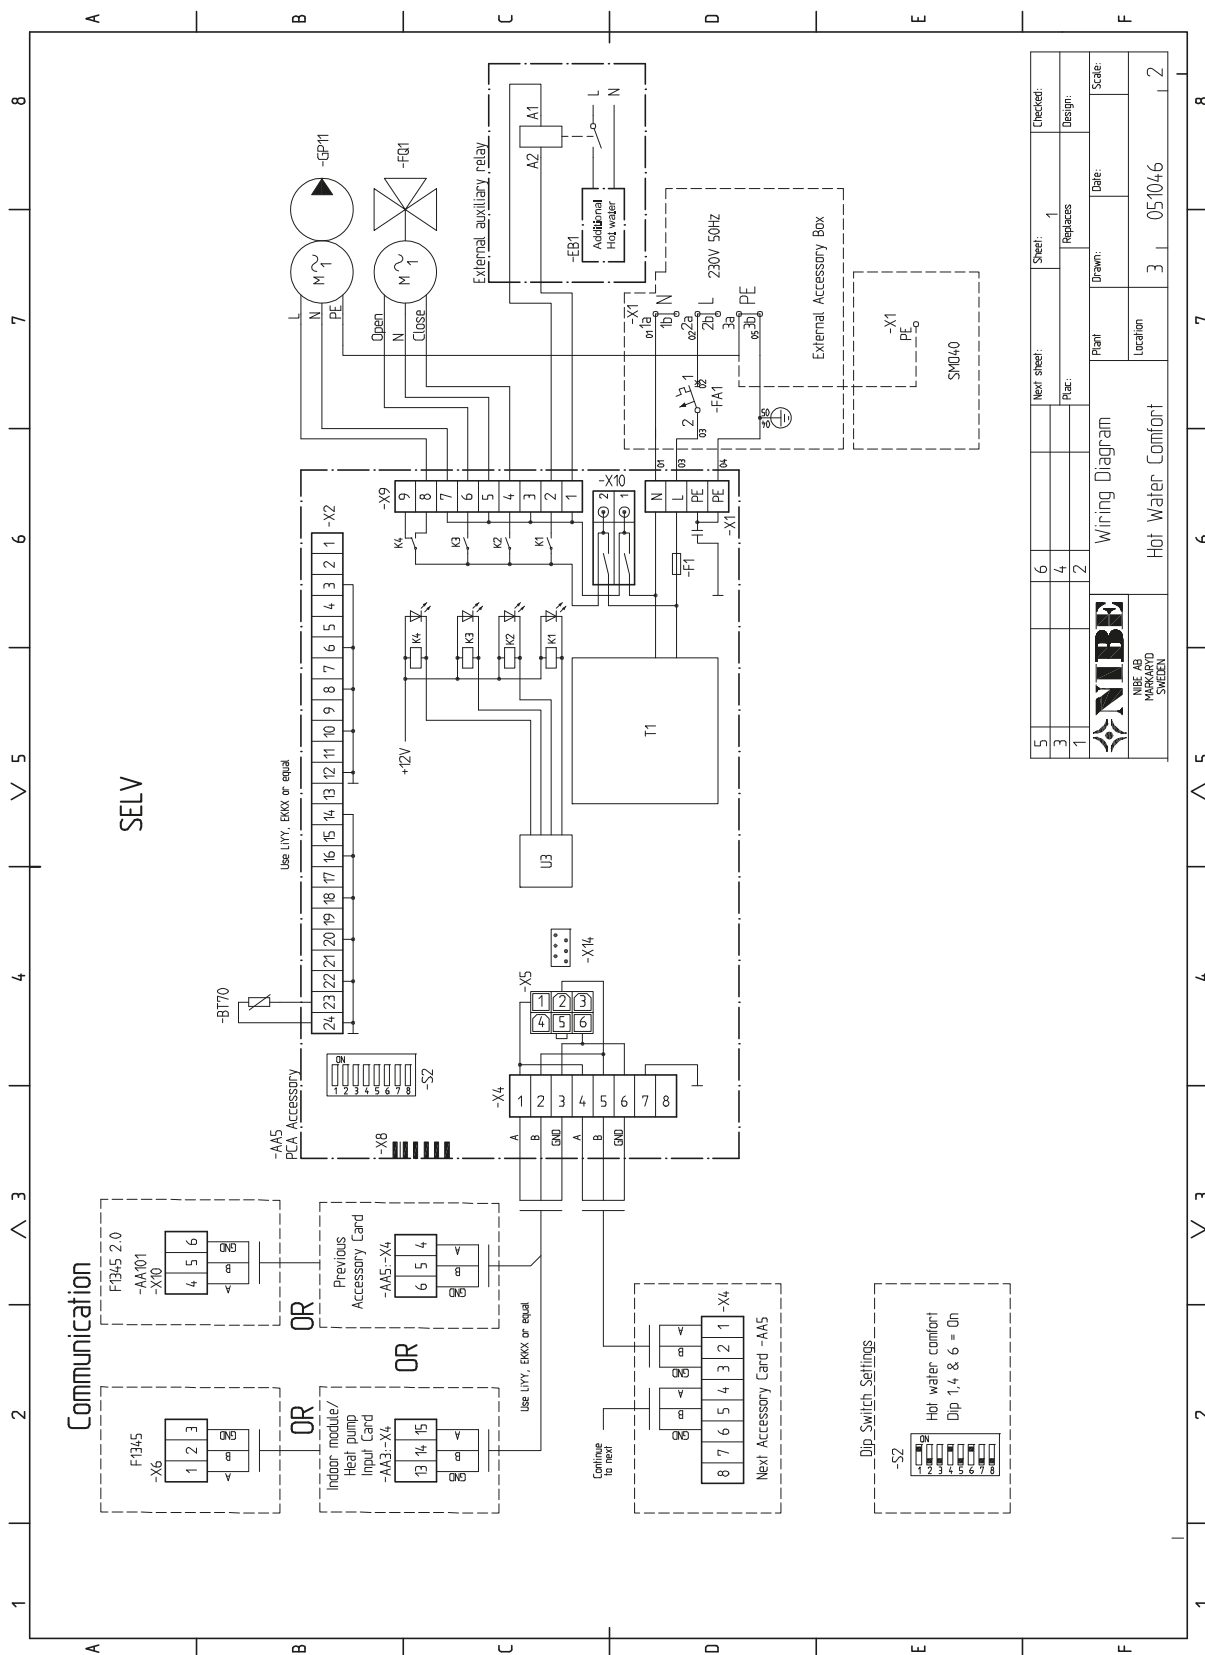

5	Next sheet:	Sheet: 1	Checked:
3	Replaces:	Replaces	Design:
1	Plant:	Drawn:	Scale:

NIBE
 NIBE AB
 HANÅKER
 SWEDEN

Wiring Diagram	
Plant:	Location:
Hot Water Comfort	
3	051046
2	2

6 Active cooling (4-pipe)

General

Connecting this accessory makes it possible to control production of cooling.

The cooling system supplies cooling from the heat pump using a circulation pump (GP12) via a reversing valve (QN12).

For the installation to work the cooling system must flow freely permanently, for example using a volume vessel for cooling.

Operating mode cooling is activated by the temperature of the outdoor sensor (BT1) and any room temperature sensors (BT50), room units or separate room sensors for cooling (BT74) (if two different rooms are to be heated respectively cooled at the same time for example.)

When cooling is required, the cooling reversing valve (QN12) and the circulation pump (GP13) are activated.

Cooling production is regulated according to the cooling sensor (BT64) and a cooling set point value that is determined by the selected cooling curve.

Cooling degree minutes are calculated in response to the value on the external temperature sensor (BT64) for cooling out and the cooling set point value.

As an accessory, cooling reversing valve is required, e.g. VCC22/VCC28.

Pipe connections


General

Pipes and other cold surfaces must be insulated with diffusion-proof material to prevent condensation.

Where the cooling demand is high, fan convectors with drip trays and drain connection are needed.


Reversing valve, cooling/heating

The reversing valve (QN12) is located in the system on the supply line from the heat pump ahead of another reversing valve according to the outline diagram.

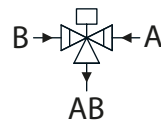

Temperature sensor

Temperature sensor (BT64) is mounted on the supply line to the cooling system at the T-pipe connection to the volume vessel (CP21).

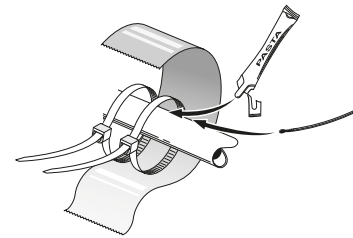

Install the temperature sensors with cable ties with the heat conducting paste and aluminium tape. Then insulate with supplied insulation tape.



NOTE

Sensor and communication cables must not be placed near power cables.

Outline diagram

Explanation

EQ1 Cooling system

AA25-AA5 Accessory card in SMO 40

BT64 Temperature sensor, flow line cooling

CP6 Accumulator tank, cooling

GP13 Cooling circulation pump

EB101 Heat pump system

BT3 Temperature sensor, return

BT12 Temperature sensor, condenser supply

GP12 Charge pump

EB101 Heat pump

FL10 Safety valve, heating medium side

HQ1 Particle filter

QM1 Tapping valve

QM31- Shut-off valve


QM32

QM43 Shut-off valve


RM11 Trim valve

Designations in component locations according to standard IEC 81346-1 and 81346-2.

Outline diagram SMO40 and active cooling (4-pipe)

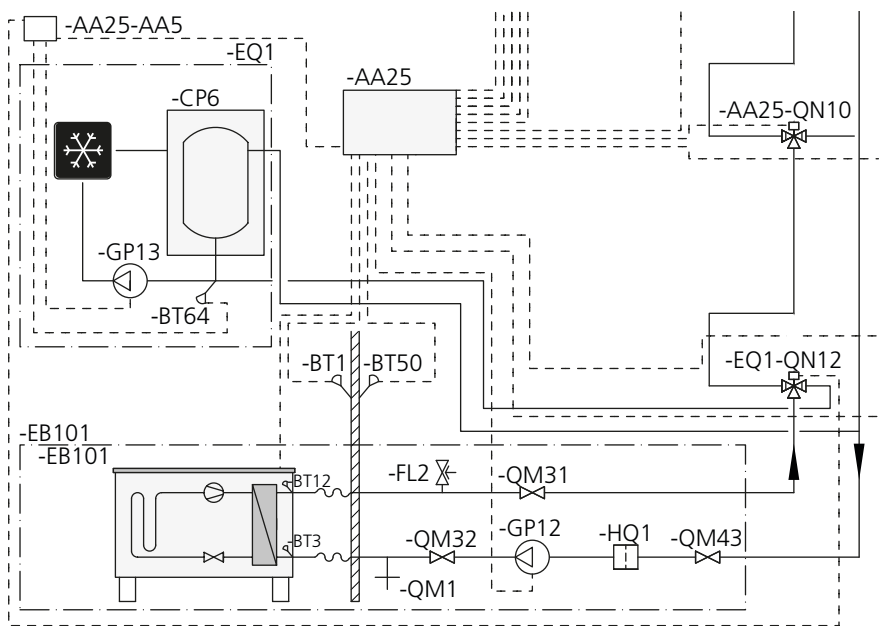

Electrical connection

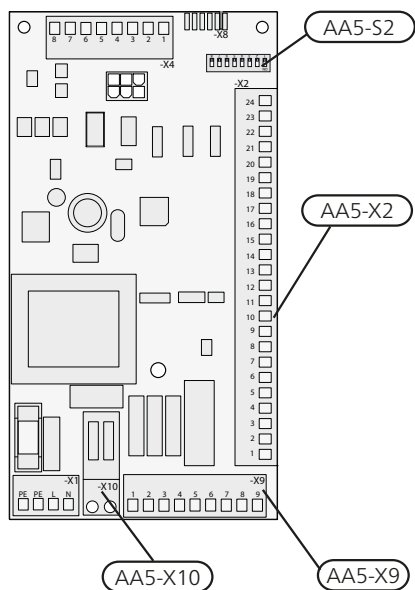

NOTE

All electrical connections must be carried out by an authorised electrician.

Electrical installation and wiring must be carried out in accordance with the stipulations in force.

SMO 40 must not be powered when installing accessory functions.

Connection of sensors and external blocking

Use cable type LiYY, EKKX or similar.


Temperature sensor (BT64)

Connect the sensor to AA5-X2:19-20.

Room temperature sensor for cooling operating mode (BT74)

An extra temperature sensor (room sensor for cooling) can be connected to SMO 40 in order to better determine when it is time to switch between heating and cooling operation.

Connect the temperature sensor to one of the AUX inputs which are behind the front hatch in SMO 40. The actual AUX input is selected in menu 5.4. Use a 2 core cable of at least 0.5 mm² cable area.

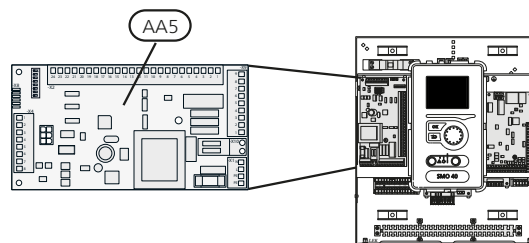


Place the temperature sensor in a neutral position in the room where the set temperature is required. It is important that the sensor is not obstructed from measuring the correct room temperature by being located, for example, in a recess, between shelves, behind a curtain, above or close to a heat source, in a draft from an external door or in direct sunlight. Closed radiator thermostats can also cause problems.

Room sensor (BT50)

To connect the room sensor (BT50), see the Installation manual for SMO 40.

External blocking (optional)


A contact can be connected to AA5-X2:21-22 to block cooling operation. When the contact closes, cooling operation is blocked.

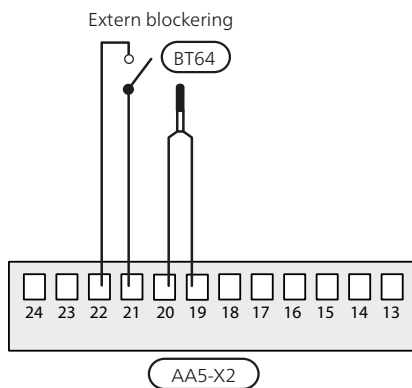

Caution
The relay outputs on the accessory card can have a max load of 2 A (230 V) in total.

Connection of the cooling circulation pump (GP13)

Connect the circulation pump (GP13) to AA5-X9:6 (230 V), AA5-X9:5 (N) and X1:PE.

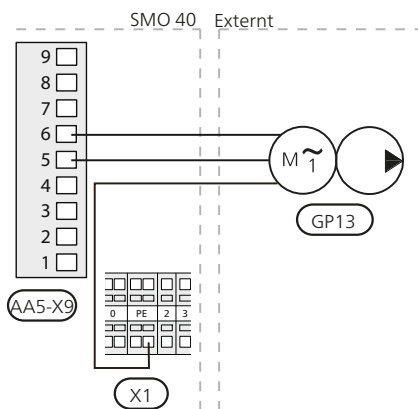


Connecting the charge pump (GP12)

Do not connect charge pump GP12 to the accessory card. See Installation manual to connect charge pump GP12.


Connection of the reversing valve motor (QN12)

Connect the motor (QN12) to AA5-X9:2 (signal), AA5-X9:1 (N) and AA5-X10:2 (230 V).

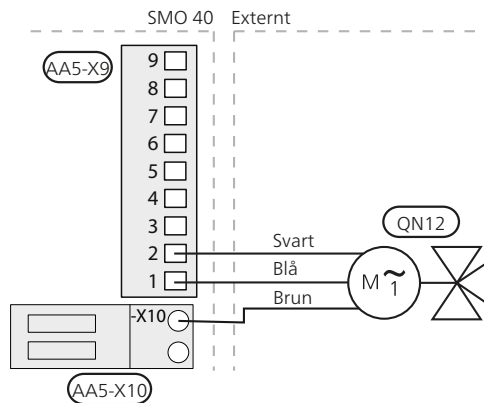

DIP switch

The DIP switch on the accessory card must be set as follows.



AA5-S2

Program settings

Program setting of SMO 40 can be performed via the start guide or directly in the menu system.

Start guide

The start guide appears upon first start-up after heat pump installation, but is also found in menu 5.7.

Menu system

If you do not make all settings via the start guide or need to change any of the settings, this can be done in the menu system.

Menu 5.2.4 - accessories

Activating/deactivating of accessories.

Select: "active cooling 4 pipe".

Menu 1.1 - temperature

Setting indoor temperature (room temperature sensor is required).

Menu 1.9.5 - cooling settings

Here you can perform the following settings:

- Lowest flow line temperature when cooling.
- Desired flow temperature at an outdoor air temperature of +20 and +40 °C.
- Time between cooling and heating operation and vice versa.
- Selection of room sensor can control cooling.
- How much the room temperature may decrease or increase compared to the desired temperature before switching to heating respectively cooling (requires room sensor).
- Degree minute levels for cooling.
- Misc. shunt settings.

Menu 4.9.2 - auto mode setting

When heat pump operating mode is set to "auto" it selects when start and stop of additional heat, heat production and cooling is permitted, dependent on the average outdoor temperature.

Select the average outdoor temperatures in this menu.

You can also set the time over which (filtering time) the average temperature is calculated. If you select 0, the present outdoor temperature is used.

Menu 5.6 - forced control

Forced control of the different components in the heat pump as well as in the different accessories that may be connected.

EQ1-AA5-K1: Signal to three way valve (QN12).

EQ1-AA5-K2: Signal (close) to mixing valve (QN18).

EQ1-AA5-K3: Signal (open) to shunt (QN18)

EQ1-AA5-K4: Activating the circulation pump (GP20).

EQ1-AA7-K1: Signal (close) to mixing valve (QN36).


EQ1-AA7-K2: Signal (open) to mixing valve (QN36).



Caution

Also see the Operating manual for SMO 40.

Wiring diagram

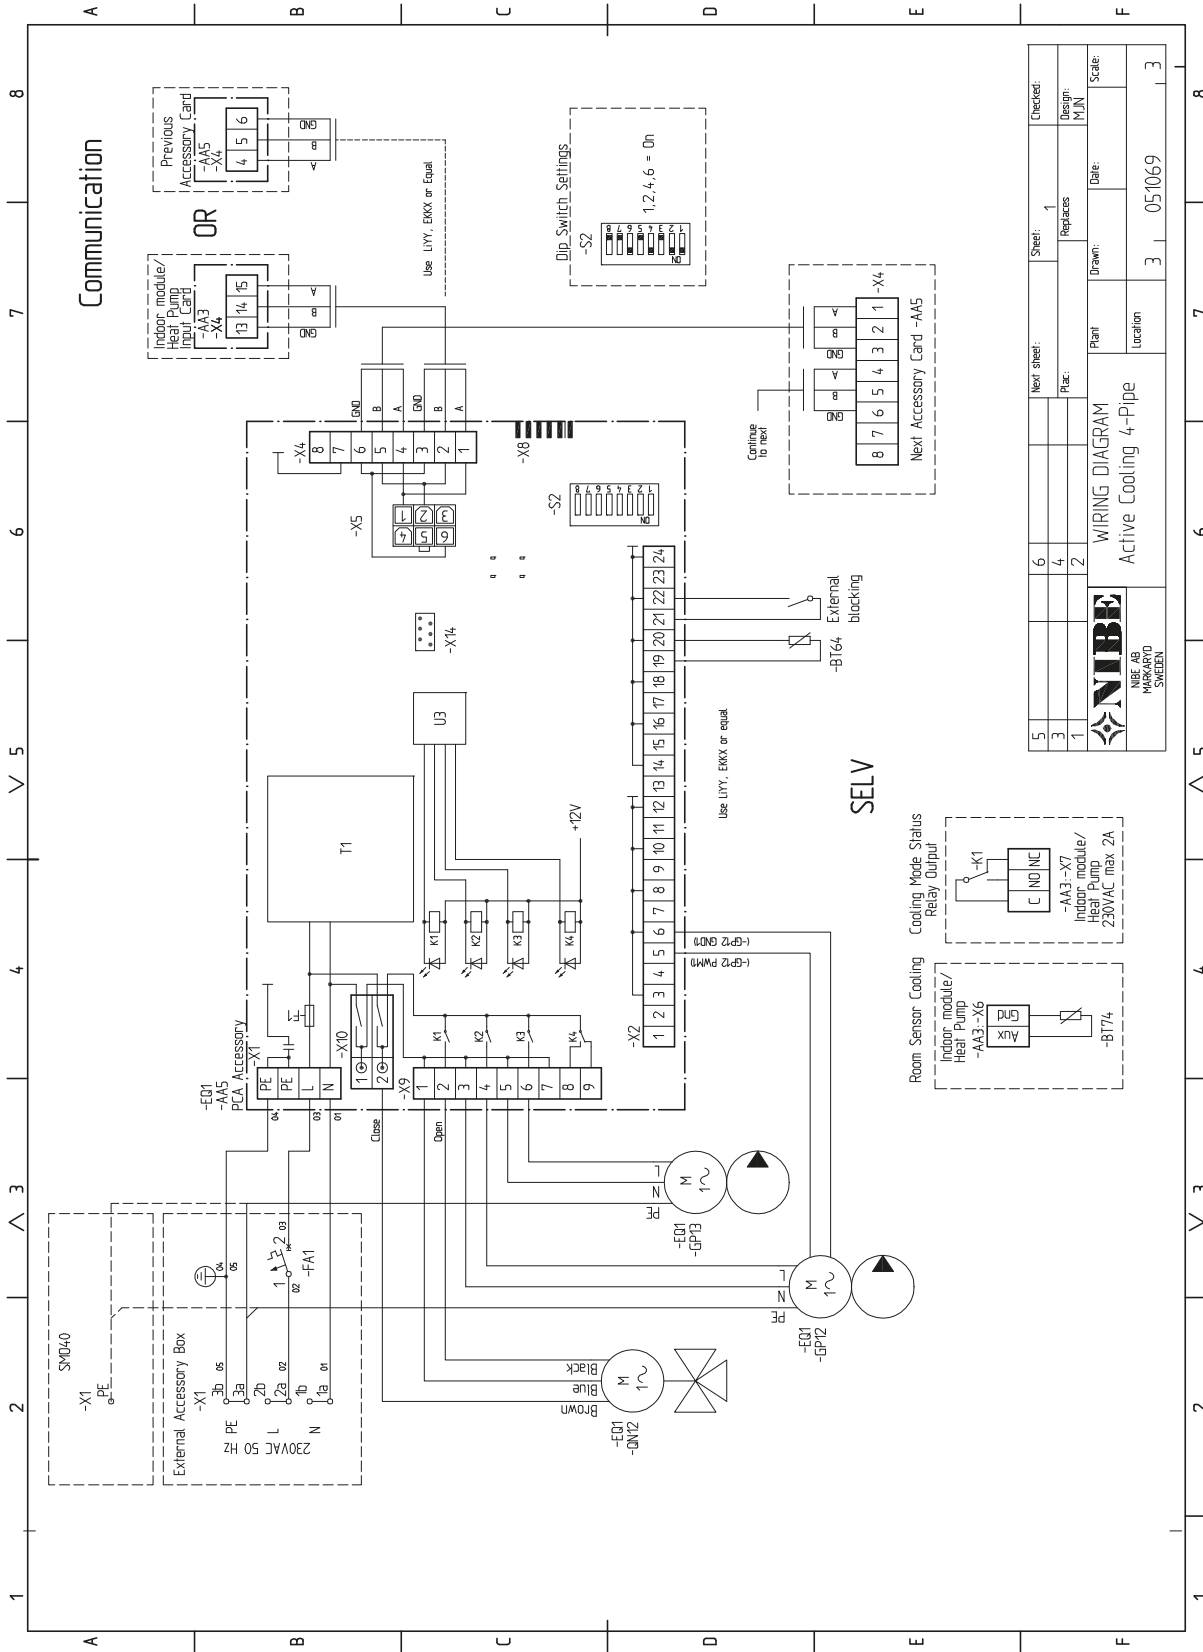

5	Next sheet:	Sheet: 1	Checked:
3	Replaces:		Descom:
1	Plant:		M/J/N
WIRING DIAGRAM		Drawn:	Date:
Active Cooling 4-Pipe		Plant:	Scale:
	Location:	3	051069
NIBE NIBE AB MÖLNÄS SWEDEN			

7 Connection of several heat pumps

General

This function allows control of up to two extra charge pumps GP12. The accessory is required for charge pump for slave - EB10X with address 3 or greater. Up to eight slaves can be combined in one system.

The control module controls the charge pumps together with the relevant slave during operation. Type CPD charge pump is recommended to use speed control which ensures correct delta-t in the different operating modes during the year. The accessory also enables external blocking of each corresponding slave.

Pipe connections

The charge pump (GP12) is positioned in the relevant charge circuit before joining with other charge circuits or branching off different sub systems via reversing valve.

Outline diagram

Explanation

EB101- Heat pump system

EB105

- BT3 Temperature sensor
- BT12 Temperature sensor
- EB100- Heat pump
- EB104
- FL10 Safety valve
- GP12 Charge pump
- HQ1 Particle filter


- QM31 - Shut-off valve
- QM32
- QM43 Shut-off valve
- QN10 Reversing valve, heating/hot water
- RM11 Non-return valve

Miscellaneous


- AA5 Accessory card (SMO 40)
- BT1 Temperature sensor
- CM1 Expansion vessel, closed
- FL2 Safety valve

Designations in component locations according to standard IEC 81346-1 and 81346-2.

Outline diagram SMO40 and connecting several heat pumps

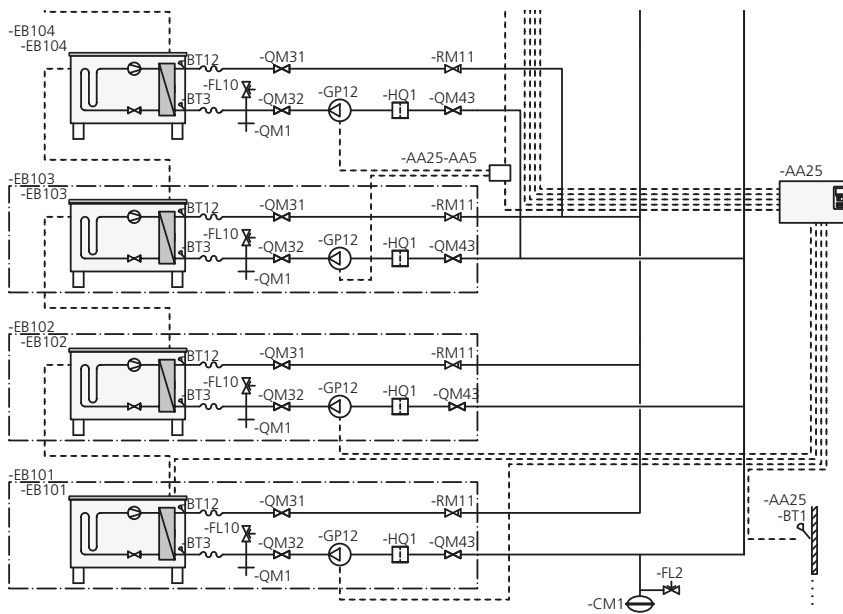

Electrical connection

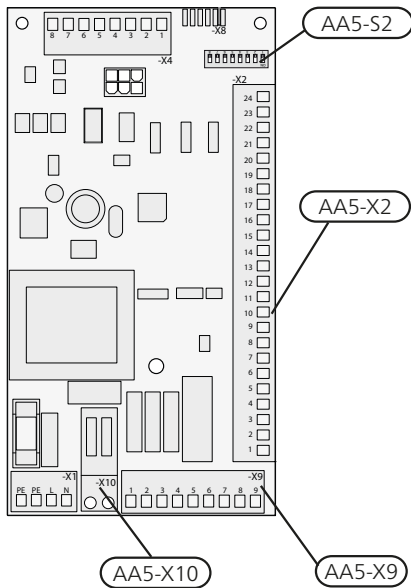

NOTE

All electrical connections must be carried out by an authorised electrician.

Electrical installation and wiring must be carried out in accordance with the stipulations in force.

SMO 40 must not be powered when installing accessory functions.

Connection of sensors and external blocking

Use cable type LiYY, EKKX or similar.

External blocking (optional)


A contact can be connected to AA5-X2:15-16 to block slave EB103. When the contact closes, EB103 is blocked, however, anti-freeze via GP12 is ensured.

A further contact can be connected to AA5-X2:17-18 to block slave EB104. When the contact closes, EB104 is blocked, however, anti-freeze via GP12 is ensured.

A contact can be connected to AA5-X2:23-24 to block cooling the accessory function. When the contact closes, the entire accessory function is blocked.

Caution

When the entire accessory function is blocked, there is no anti-freeze for connected slaves!

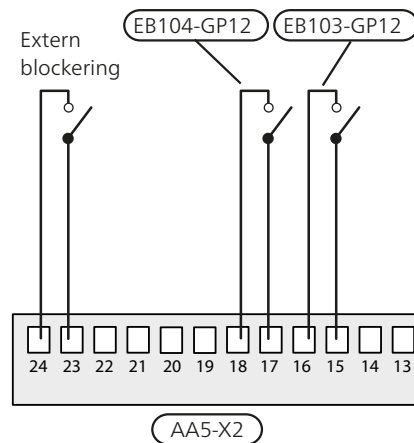


Caution

The relay outputs on the accessory card can have a max load of 2 A (230 V) in total.

Connection of the circulation pump (GP12)


Connect the circulation pump (EB103-GP12) to AA5-X9:4 (230 V), AA5-X9:3 (N) and X1:PE.

Connect the circulation pump (EB104-GP12) to AA5-X9:6 (230 V), AA5-X9:5 (N) and X1:PE.

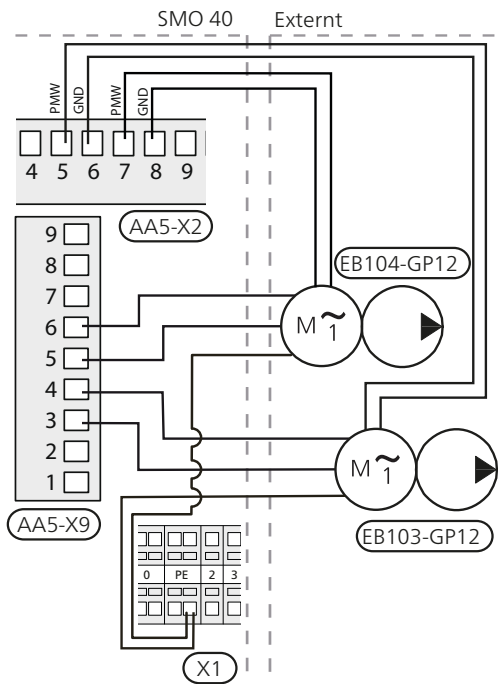

DIP switch

The DIP switch on the accessory card must be set as follows.



AA5-S2

Program settings

Program setting of multi-installation during operation of several heat pumps can be performed via the start guide or directly in the menu system.

Start guide

The start guide appears upon first start-up after heat pump installation, but is also found in menu 5.7.

Menu system


If you do not make all settings via the start guide or need to change any of the settings, this can be done in the menu system.

Menu 5.2.2 - installed slaves

Activating/deactivating slaves

Menu 5.2.3 - docking

Enter how your system is docked regarding pipes, for example to pool heating, hot water heating and heating the building.

 **TIP**
Examples of docking alternatives can be found at www.nibe.eu.






This menu has a docking memory which means that the control system remembers how a particular reversing valve is docked and automatically enters the correct docking the next time you use the same reversing valve.



Master/slave: Select which heat pump the docking setting is to be made for (if the heat pump is alone in the system only master is displayed).

Compressor: Select if your compressor in the heat pump is blocked (factory setting), externally controlled via soft input or standard (docked for example to pool heating, hot water charging and heating the building).

Marking frame: Move around the marking frame using the control knob. Use the OK button to select what you want to change and to confirm setting in the options box that appears to the right.

Workspace for docking: The system docking is drawn here.

Symbol	Description
	Compressor (blocked)
	Compressor (externally controlled)
	Compressor (standard)
	Reversing valves for hot water control. The designations above the reversing valve indicate where it is electrically connected (EB101 = Slave 1, CL11 = Pool 1 etc.).
	Pool 1

Symbol	Description
	Pool 2
	Heating (heating the building, includes any extra climate system)

Menu 5.11.1 - EB103


Make settings for the installed slaves here.

Menu 5.6 - forced control


Forced control of the different components in the heat pump as well as in the different accessories that may be connected.

- Compressor speed 3
- EB103 - GP12 - AA5-K2
- Charge pump speed 3

- Compressor speed 4
- EB104 - GP12 - AA5-K3
- Charge pump speed 4

 **Caution**
Also see the Installer manual for SMO 40.

Electrical circuit diagram

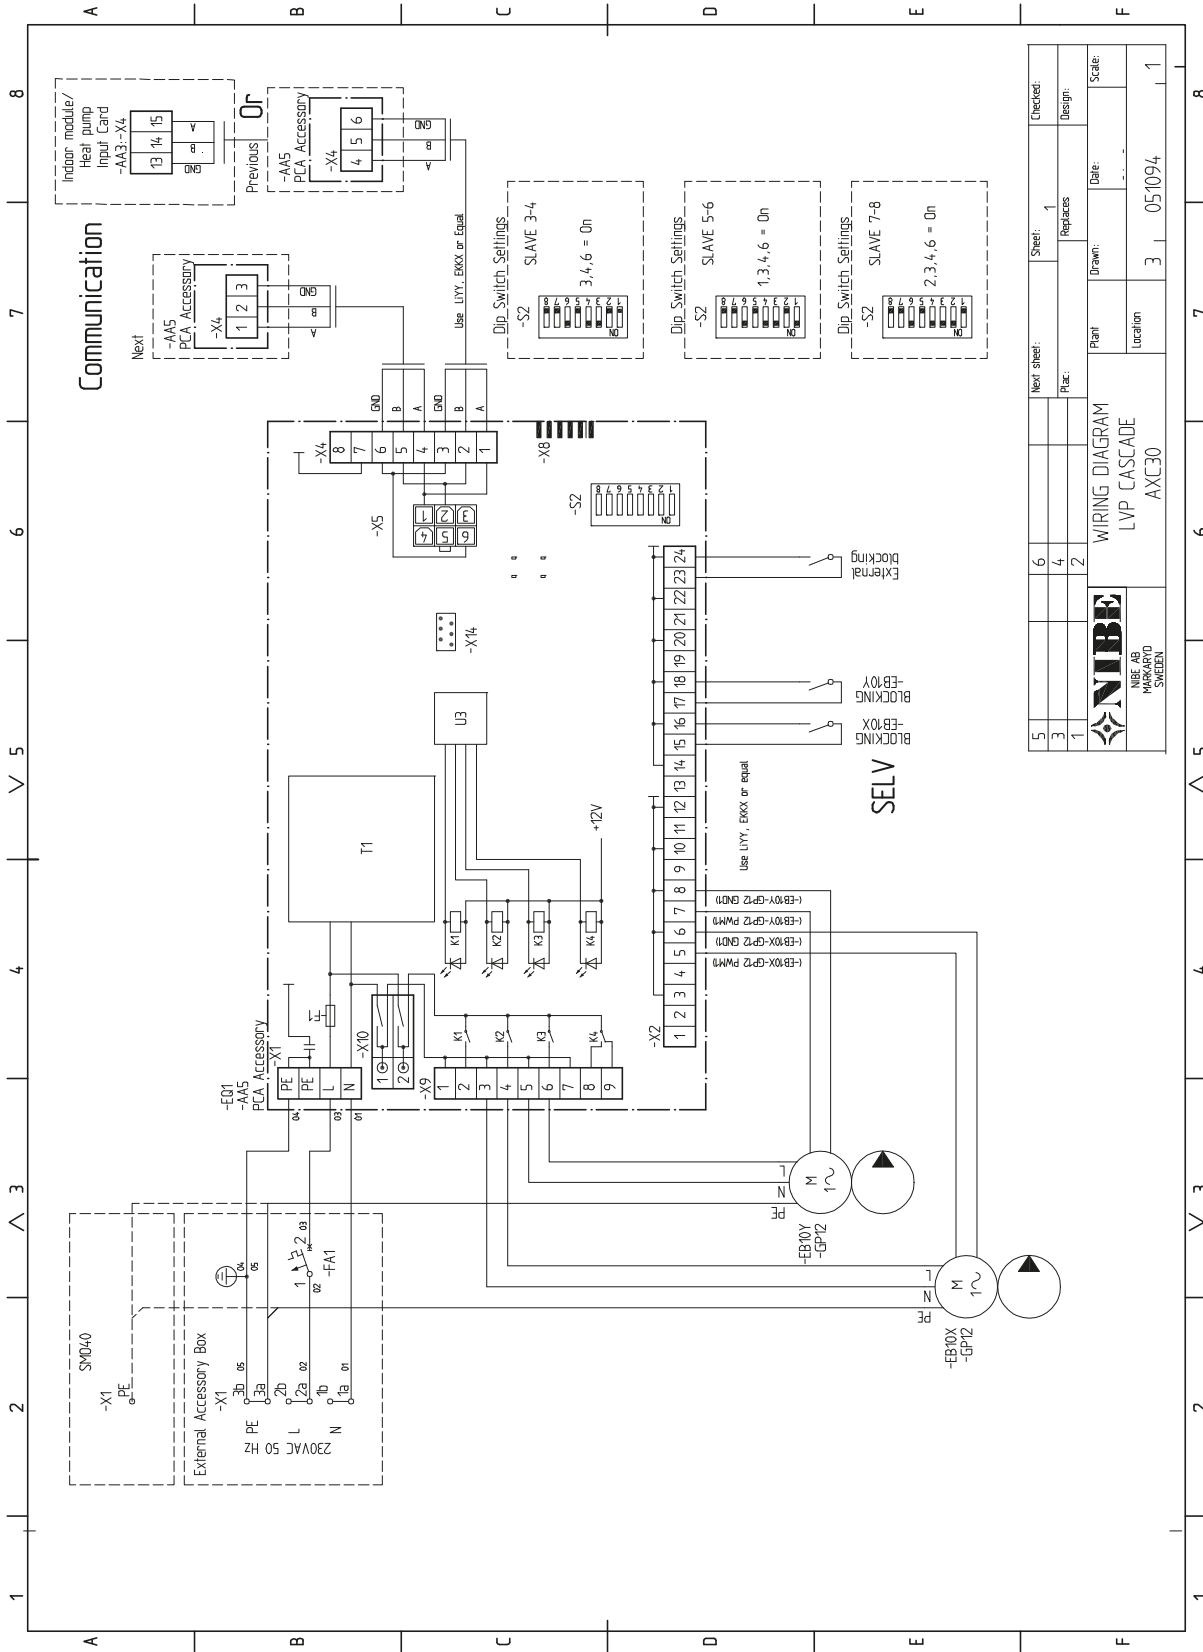

5	Next sheet:	Sheet:	Checked:
3		1	
1	Replaces:		Design:
	Plant:	Date:	Scale:
	Location:		
		3	051094
		1	1



NIBE
WIRING DIAGRAM
LVP CASCADE
AXC30

NIBE AB Sweden
Hannabadsvägen 5
Box 14
SE-285 21 Markaryd
info@nibe.se
www.nibe.eu

